


PIONEER®

Service Manual

**CIRCUIT & MECHANISM
DESCRIPTIONS
REPAIR & ADJUSTMENTS**

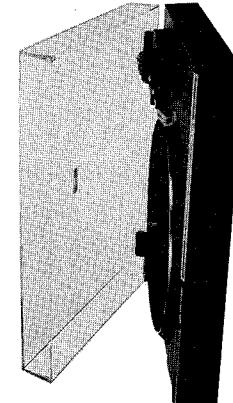

STEREO TURNTABLE

PL-450 PL-405

MODEL PL-450 COMES IN FIVE VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
KU	AC 120V only	U.S.A. model
KC	AC 120V only	Canada model
WEM	AC 220-240V	European continent model
WB	AC 220-240V	United Kingdom model
R	AC 110-120, 220-240V (switchable)	General export model

MODEL PL-405 COMES IN FOUR VERSIONS DISTINGUISHED AS FOLLOWS:

Type	Voltage	Remarks
WB	AC 220-240V	United Kingdom model
R	AC 110-120, 220-240V (switchable)	General export model
KU	AC 120V only	U.S.A. model
KC	AC 120V only	Canada model

- This service manual is applicable to the PL-450/KU type.
- Both model PL-450 and PL-405 have the same basic mechanism and performance. The only difference is in appearance.
- For servicing of the PL-450/KC, WEM, WB, R and PL-405/R, WB, KU, KC types, please see 21 ~ 30 page.
- Ce manuel d'instruction se réfère au mode de réglage en français.
- Este manual de servicio trata del método de ajuste escrito en español.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 11760, Long Beach, California 90801 U.S.A.
TEL: (800) 421-1404, (213) 420-5914

PIONEER ELECTRONIC (EUROPE) N.V. Keetberghlaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

CONTENTS

1. SPECIFICATIONS	2
2. PANEL FACILITIES	3
3. DISASSEMBLY	4
4. EXPLODED VIEWS	6
5. ELECTRICAL PARTS LIST	10
6. P.C. BOARDS CONNECTION DIAGRAM	11
7. SCHEMATIC DIAGRAM	12
8. PARKING	13
9. PRECAUTIONS FOR REASSEMBLY	14
10. ADJUSTMENTS	16
10. RÉGLAGE	18
10. AJUSTE	19
11. FOR PL-450/KC, R AND WEM TYPES	21
12. FOR PL-405/R, WB, KU AND KC TYPES	26

1. SPECIFICATIONS

Motor and Turntable

Drive System	Belt-drive
Motor	DC motor
Turntable Platter	280 mm diam. aluminum alloy die-cast
Speeds	33-1/3 and 45 rpm
Wow and Flutter	Less than 0.05% (W/RMS)
Signal-to-Noise Ratio	$\pm 0.07\%$ WTD Peak (DIN) More than 68 dB (DIN-B)
(with Pioneer cartridge model PC-250T)	

Tonearm

Type	Static-balance type, Straight pipe arm
Effective Arm Length	221 mm 15.5 mm

Subfunctions

Auto-return, Quick play, Quick stop, Arm elevation, Free stop hinges

Miscellaneous

Power Requirements	1
WEM, WB, WP models	AC 220 — 240 V, 50, 60 Hz
KU, KC models	AC 120 V, 60 Hz
R, R/G models	110 — 120 V/220 — 240 V (switchable), 50, 60 Hz


NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

Accessories

EP Adapter	1
Operating Instructions	1

2. PANEL FACILITIES

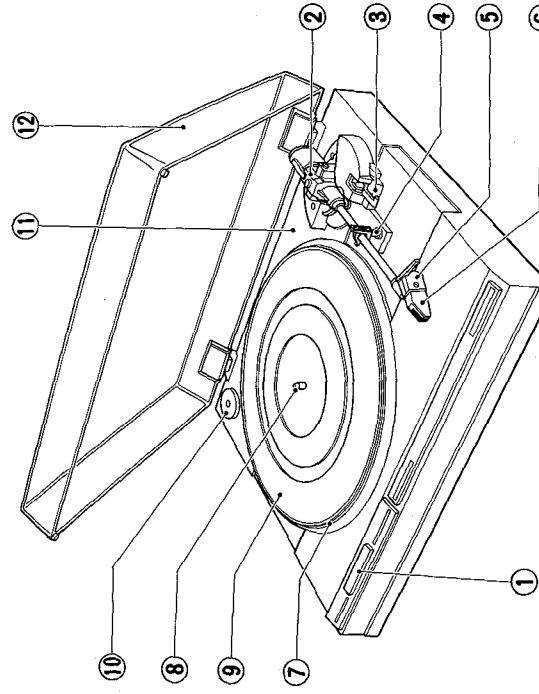

① SPEED SWITCH

Set this switch in accordance with the speed of the record which is to be played.

[33] (released position): For 33-1/3 rpm records.

[45] (depressed position): For 45 rpm records.

② TONEARM

③ ARM ELEVATION LEVER

- Use the lever for record play.
- Use the lever to suspend record play temporarily.
- Use the lever when changing the tracks during actual play.

Lever in "UP" position:

The tonearm rises up, lifting the stylus off the record.

Lever in "DOWN" position:

The tonearm descends, lowering the stylus onto the record.

④ ARM REST

This serves to hold and clamp the tonearm. When moving the tonearm, release the clamp.

⑤ HEADSHELL

⑥ CARTRIDGE (PC-250T)

⑦ PLATTER

⑧ PLATTER SHAFT

⑨ RUBBER MAT


⑩ EP ADAPTER

This is used when playing records without a "large center hole".

⑪ CABINET

⑫ DUST COVER

3. DISASSEMBLY

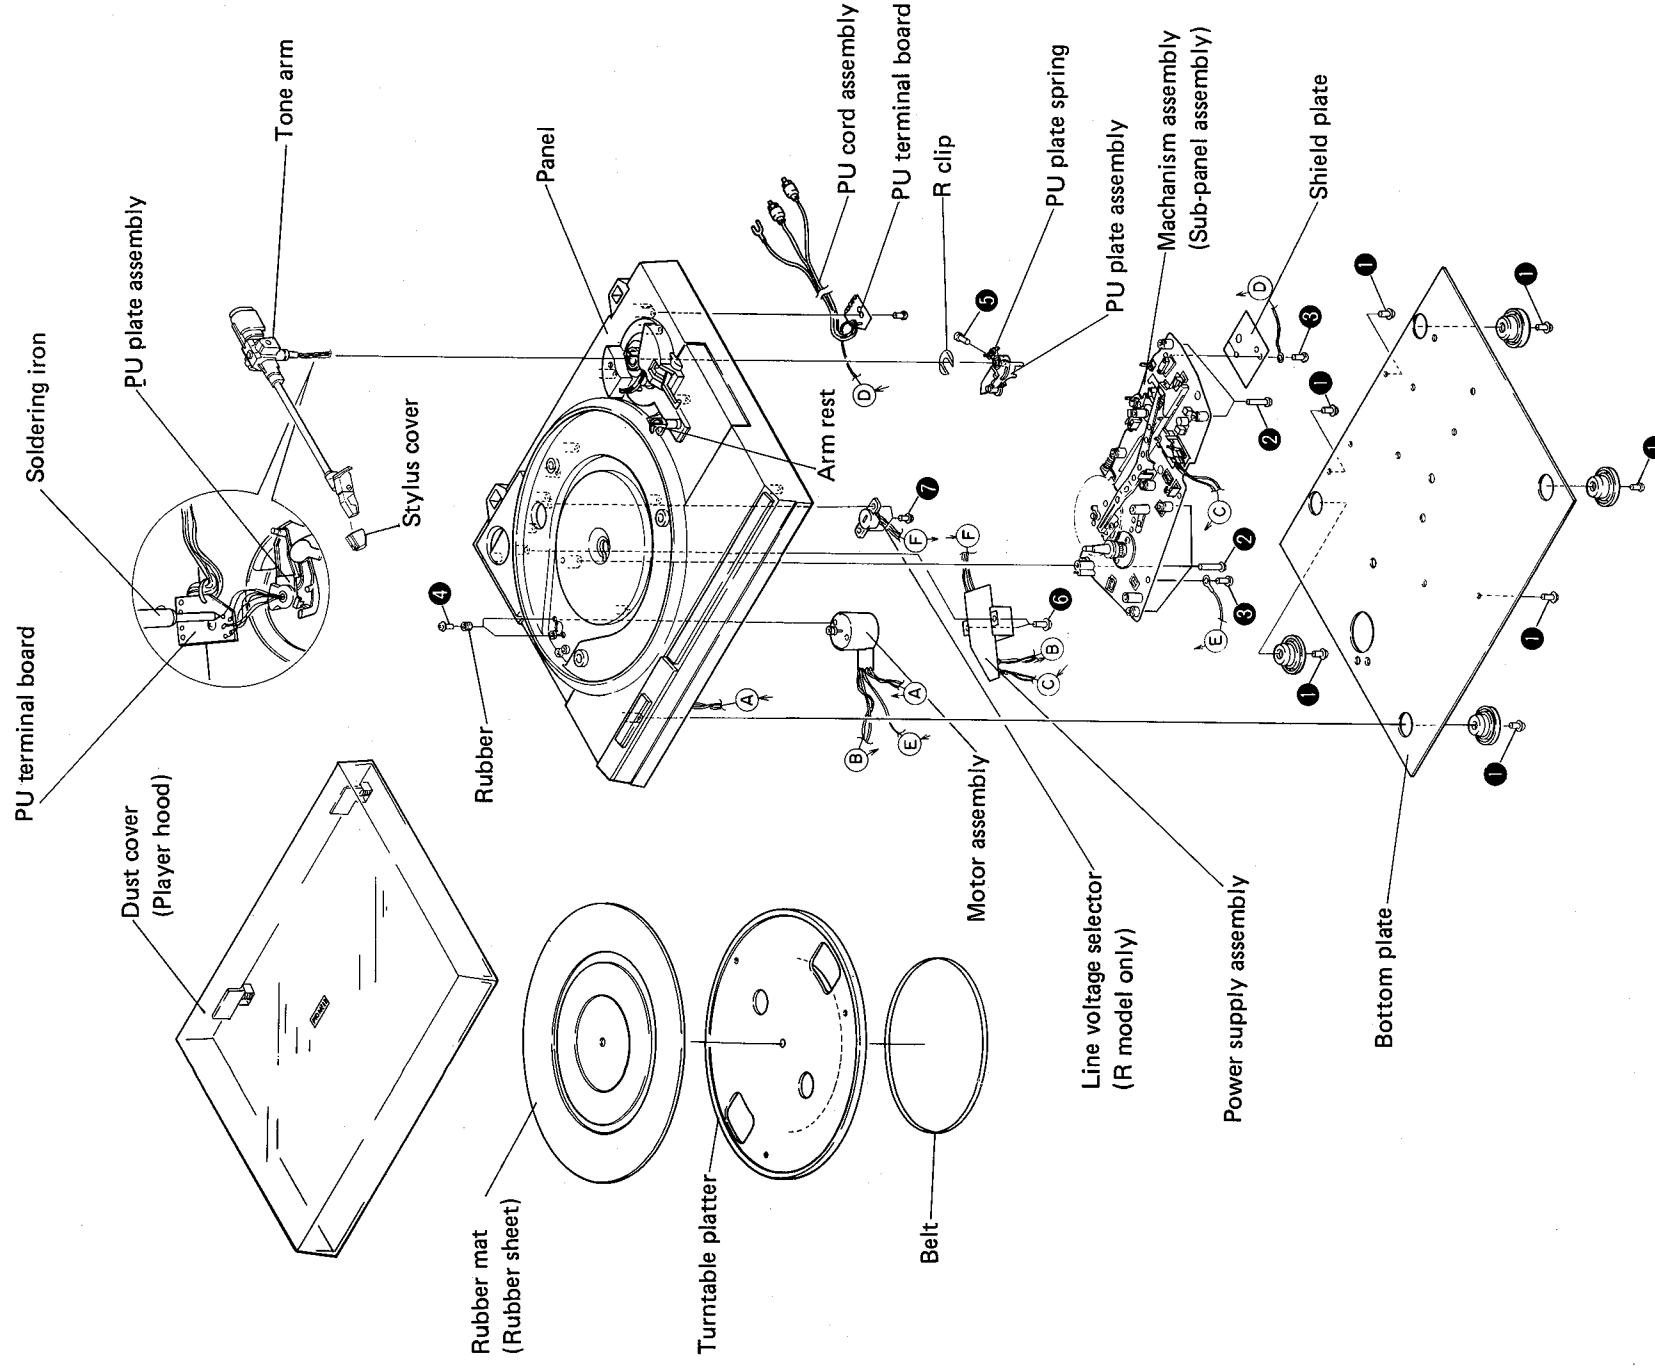

● Mechanism Ass'y and Motor

1. Turn on the turntable and free the mechanism.
2. Fasten the tone arm to the arm rest.
3. Remove the rubber sheet and turntable platter.
4. Close the player hood and turn the player upside down and place it on a soft cloth so that the player hood is not damaged.
5. Remove the seven screws ①, and remove the bottom plate.
6. Remove five screws ② and two screws ③.
7. Disconnect lead wire ④.

The mechanism ass'y can be removed from the panel.

8. Using a soldering iron, disconnect the lead wires ⑤ from the motor.
- Disconnect lead wire ⑥.
- Remove the two screws ⑦, and remove the motor.

● Tone Arm

1. Remove the mechanism ass'y from the panel.
2. Using a soldering iron, disconnect the PU lead wires (arm lead wires) from the PU terminal board.
3. Remove the one screw ⑧, and remove the PU plate ass'y from the tone arm.
4. Remove the R clip.
5. Turn the player onto its side, remove the arm reset clamp, and remove the tone arm from the panel.

● Power Supply Ass'y

Remove the two screw ⑨.
(Remove the two screw ⑩ (only R model))

See pages 14 ~ 16 for the parts installation and assembly precautions.

4. EXPLODED VIEWS

4.1 EXTERIOR

Parts List

NOTES:

- Parts without part number cannot be supplied.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks  and  **★ ★ GENERALLY MOVES FASTER THAN ★**
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	PNV-034	Dust cover		26.	PBH-238	Elevation cam spring
	2.	PXB-378	Hinge assembly		27.	IPZ30P100FMC	Screw 3 x 10
	3.	PEA-061	Rubber mat assembly		28.	PBK-053	EV plate spring (A)
	4.	PNR-192	Turntable platter		29.	PXT-462	EV plate spring (B) unit
★	5.	PEB-224	Belt		30.	PBF-020	Washer
	6.	PAD-147	SP button unit		31.	PBX-375	PU plate (B) assembly
	7.	XWS-022	Speed selector assembly		32.	YS40FBT	Washer
★★	8.	PSG-049	Push switch (S2)		33.	PMD40P080FMC	Screw 4 x 8
★	9.	PYY-163	Motor assembly		34.	WC40FMC	Washer
	10.			35.	PNC-227	PU spring washer
	11.	IPZ30P290FMC	Screw 3 x 29		36.	PBH-308	PU plate spring
	12.	PDZ30P060FMC	Screw 3 x 6		37.	PEB-251	Insulator
	13.	PPZ30P080FMC	Screw 3 x 8		38.	PBK-059	R clip
	14.	PBA-112	Screw		39.	YE30S	Retaining ring (T type E)
	15.	PEB-172	Motor rubber		40.	BPZ26P120FZK	Screw 2.6 x 12
	16.	PNY-151	Panel		41.	PBA-170	Screw
	17.	PXB-374	EV sheet assembly		42.	XWR-047	Power supply assembly
	18.	PXB-373	Arm rest assembly		43.	PDG-023	AC power cord
	19.	PPD-658	Tonearm assembly		44.	PSB-011	Line voltage selector (R model only)
	20.	PXV-952	Cartridge (without stylus)				
	21.	PNX-972	Stylus cover		101.		Sub-panel assembly
	22.	PXB-345	PU cord assembly		102.		Bottom plate
	23.	PBH-293	EV spring		103.		Shield plate
	24.	PNX-344	EV cam lever				
	25.	PNX-339	Elevation cam				

4


2

८

6

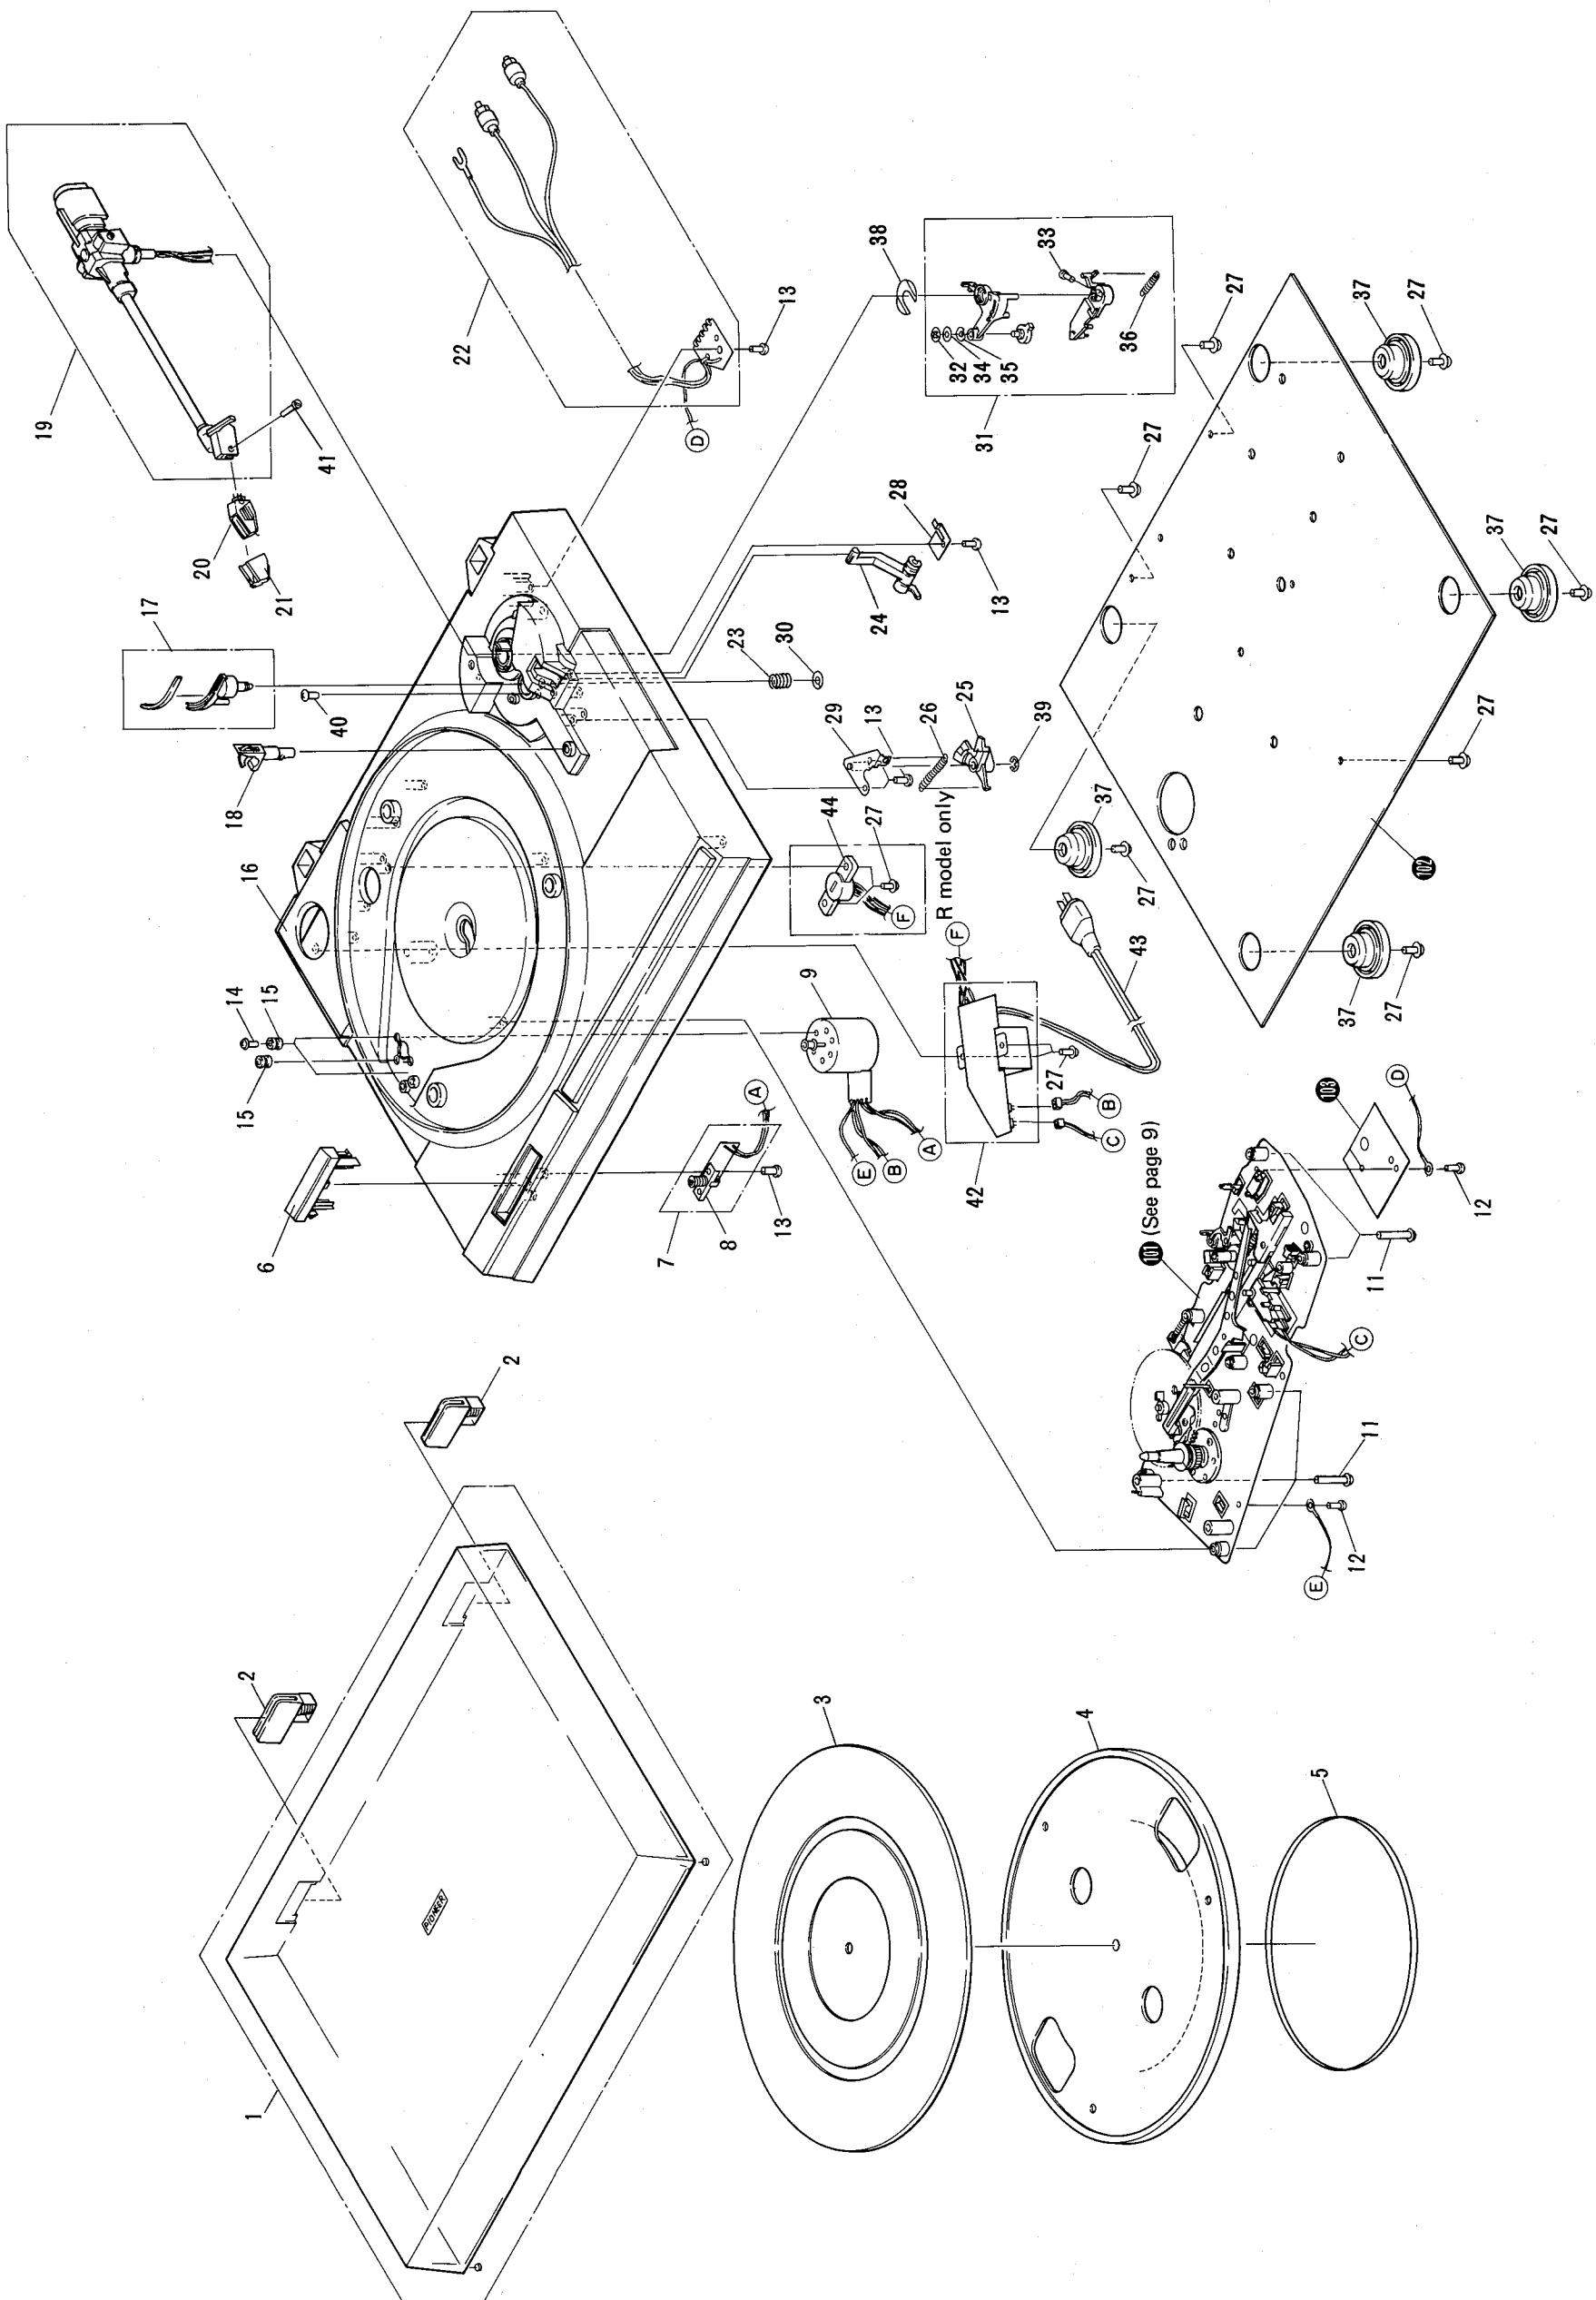












































7. SCHEMATIC DIAGRAM

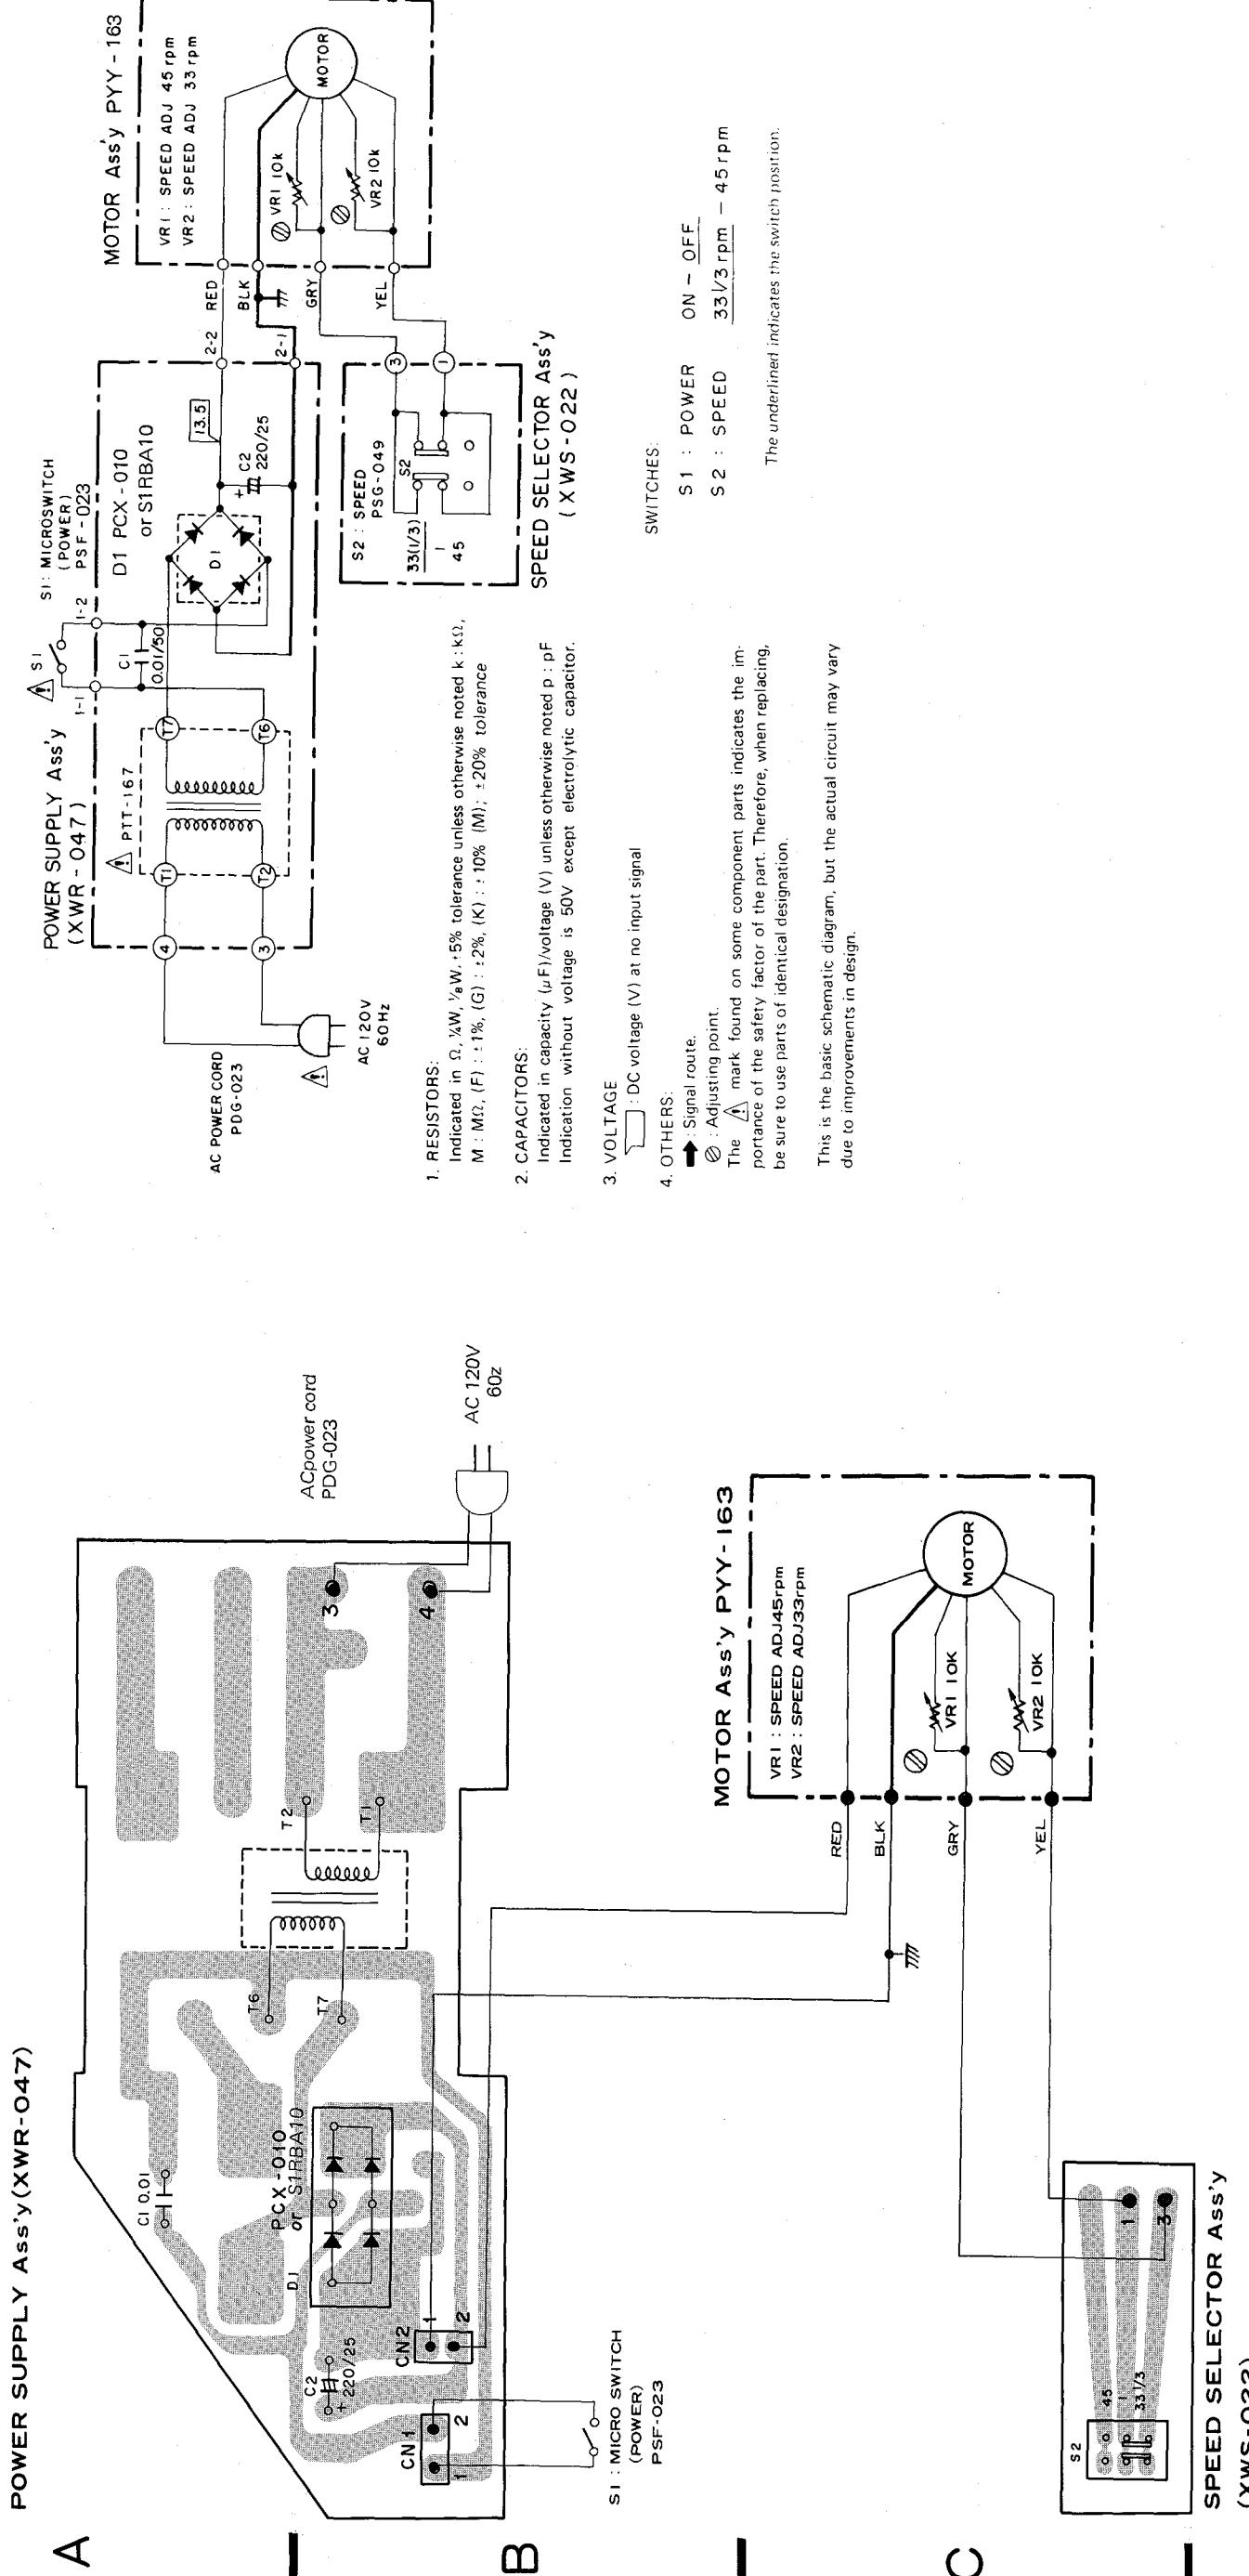

8. PACKING

Parts List

Mark	No.	Part No.	Description
1.	PEA-061		Rubber mat assembly
2.	PRB-256		Operating instructions (English)
3.			Sheet
4.	PBA-144		Clamp screw
5.		
6.	N93-603		45 adaptor
7.	PNX-294		Platter cushion
8.	PHA-175		Protector (L)
9.	PHA-176		Protector (R)
10.	PHH-123		Packing case

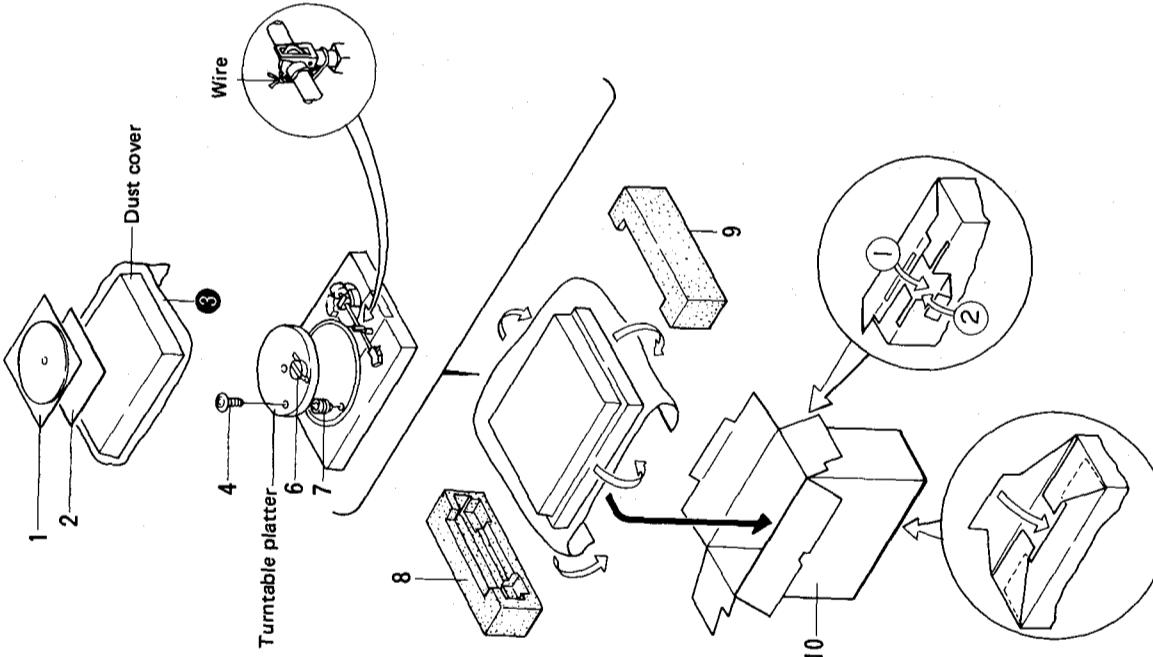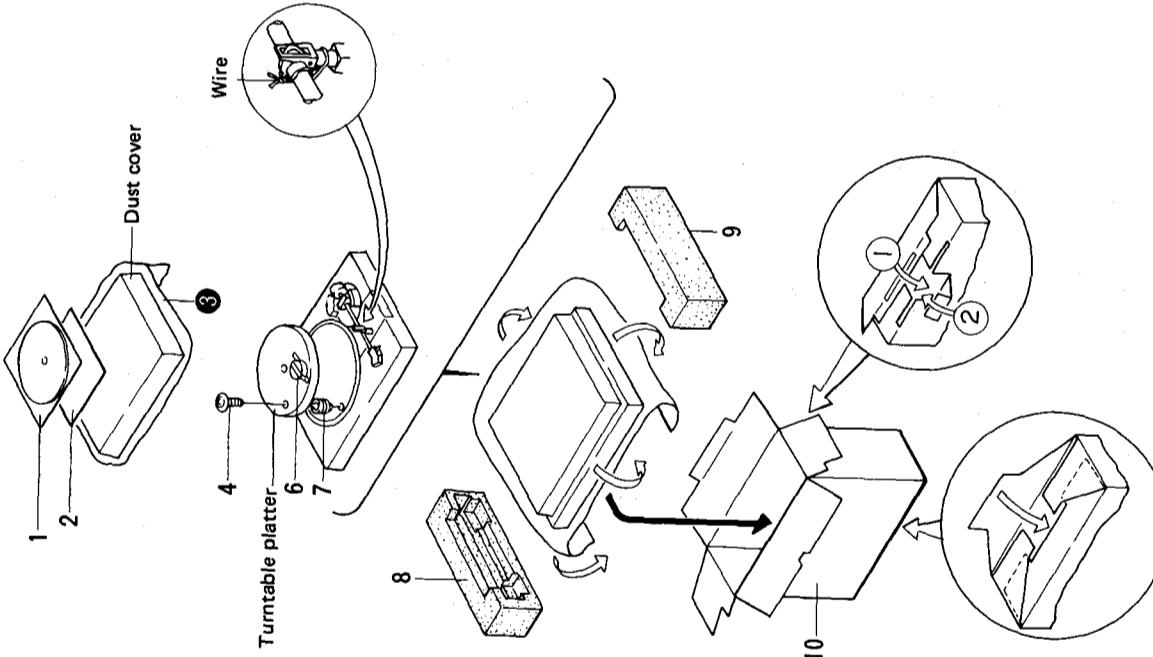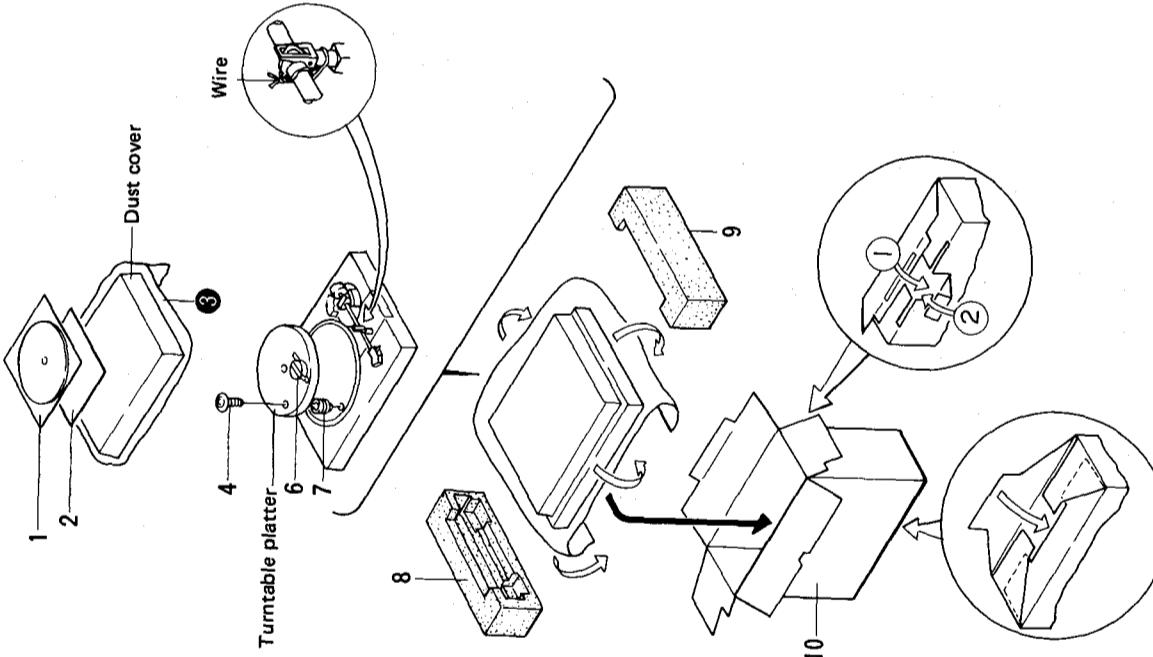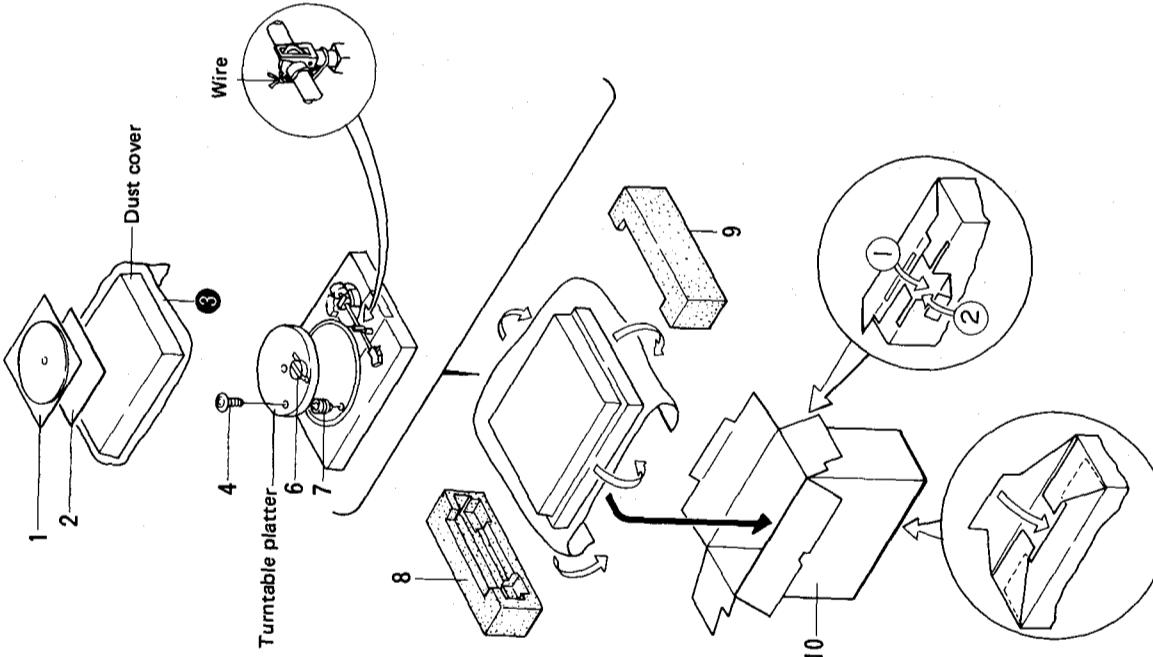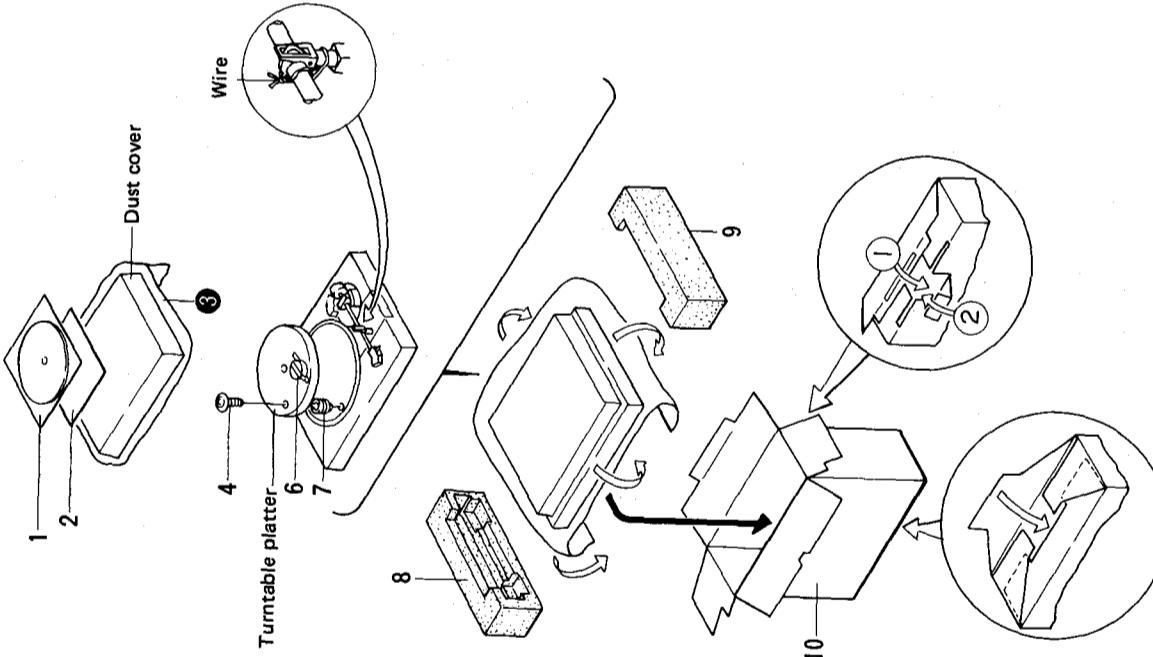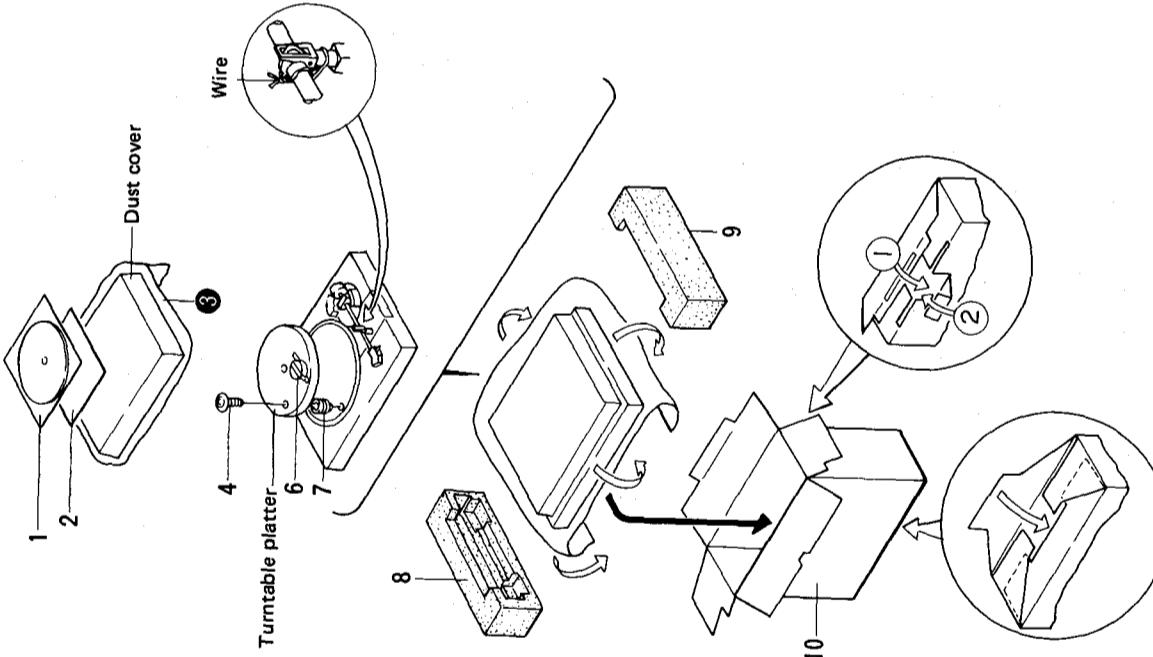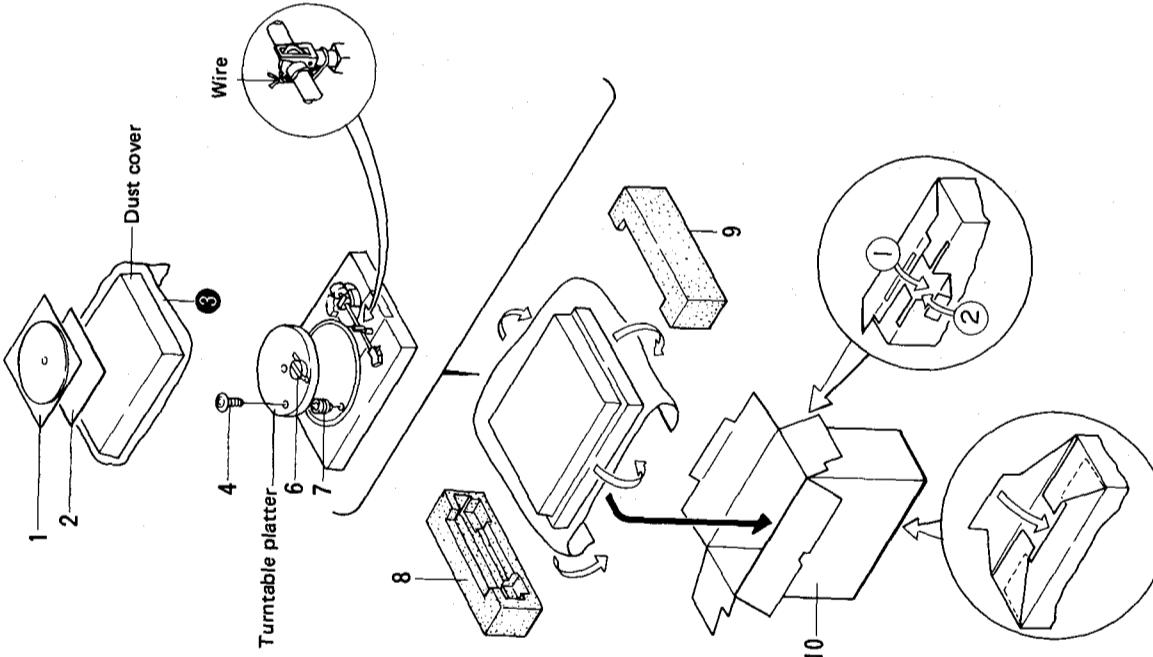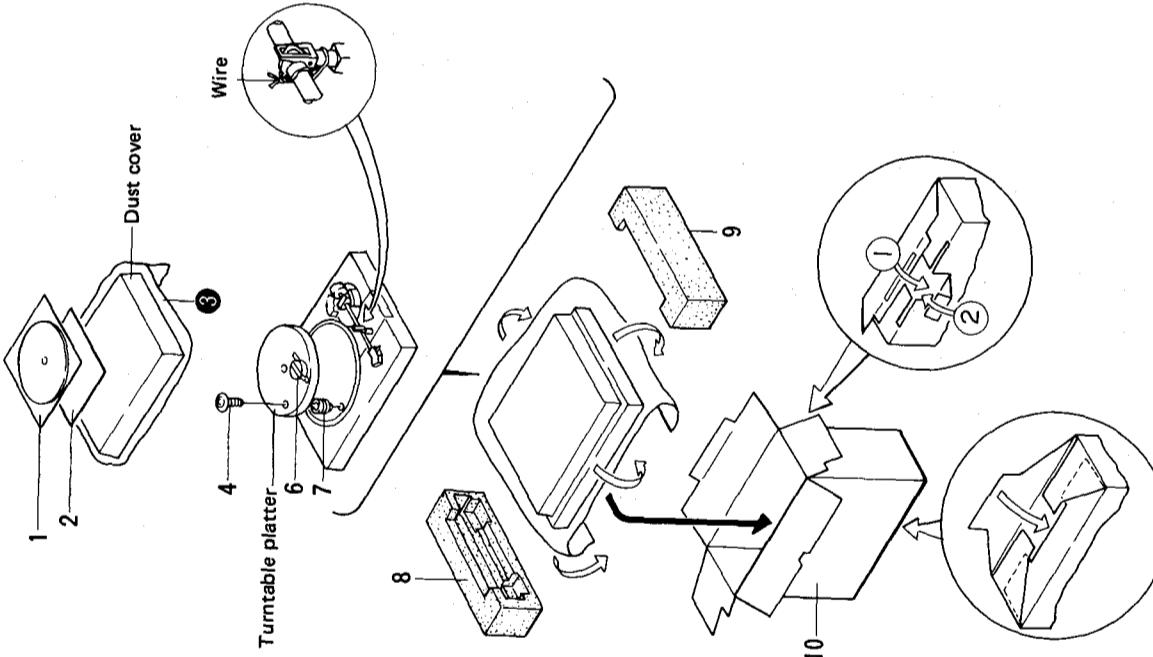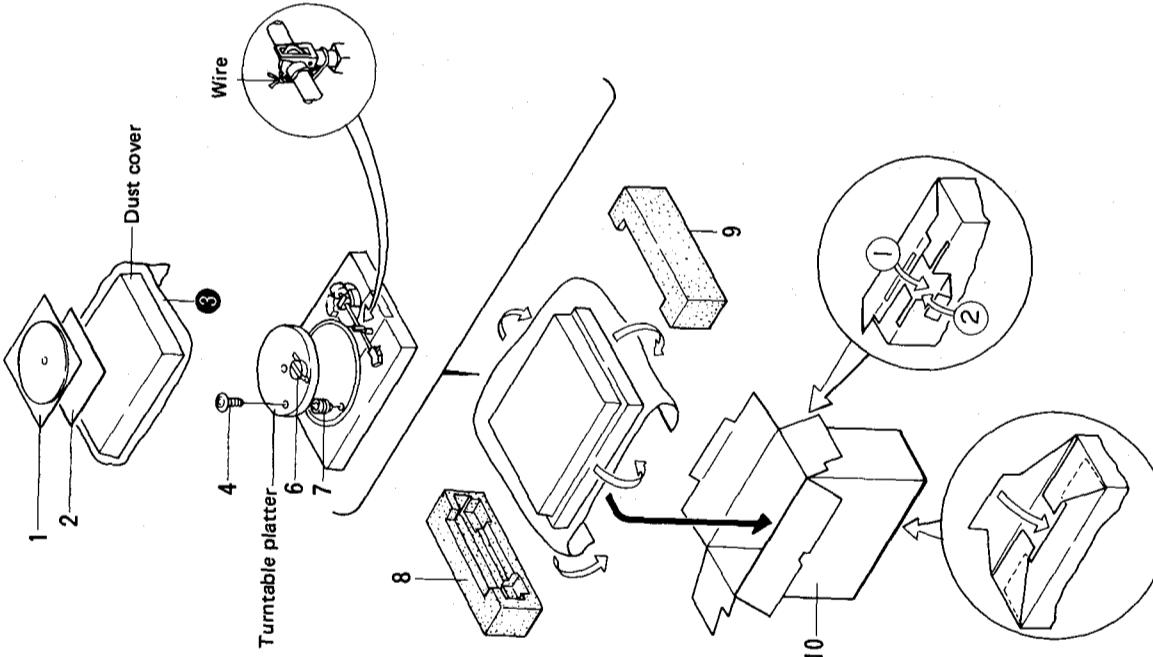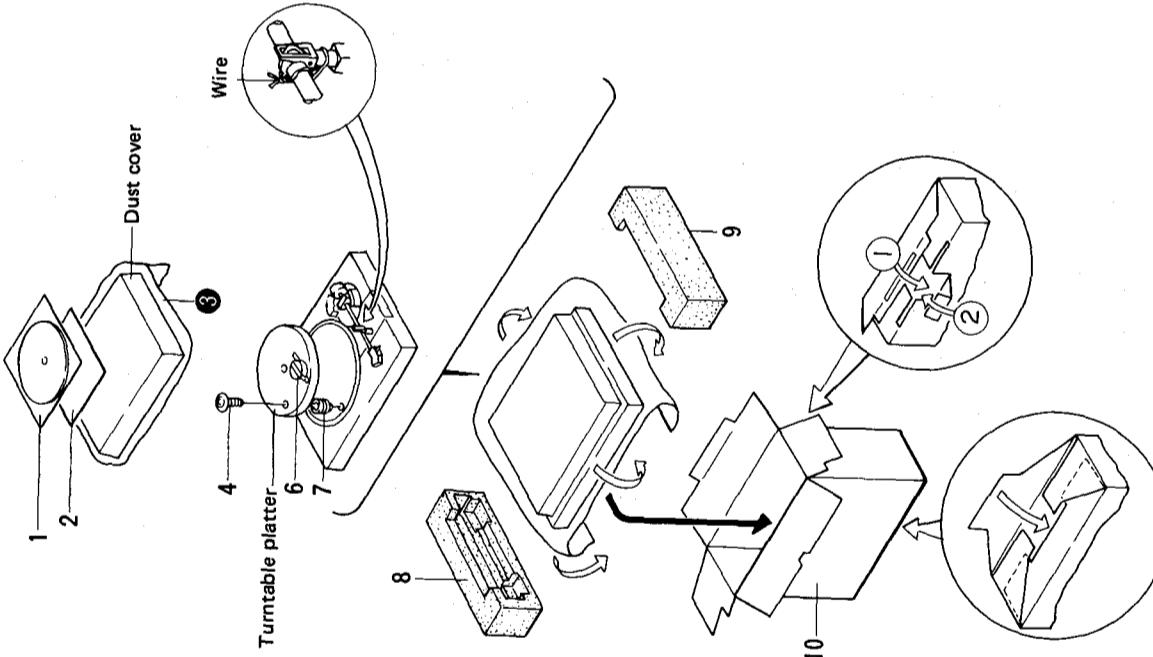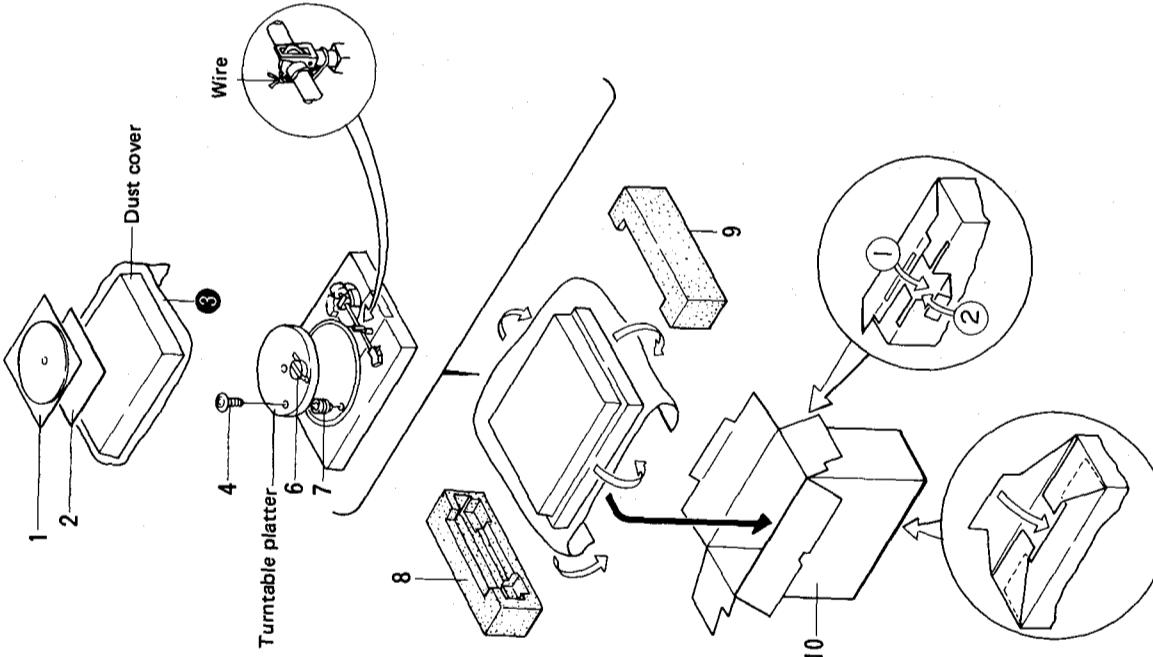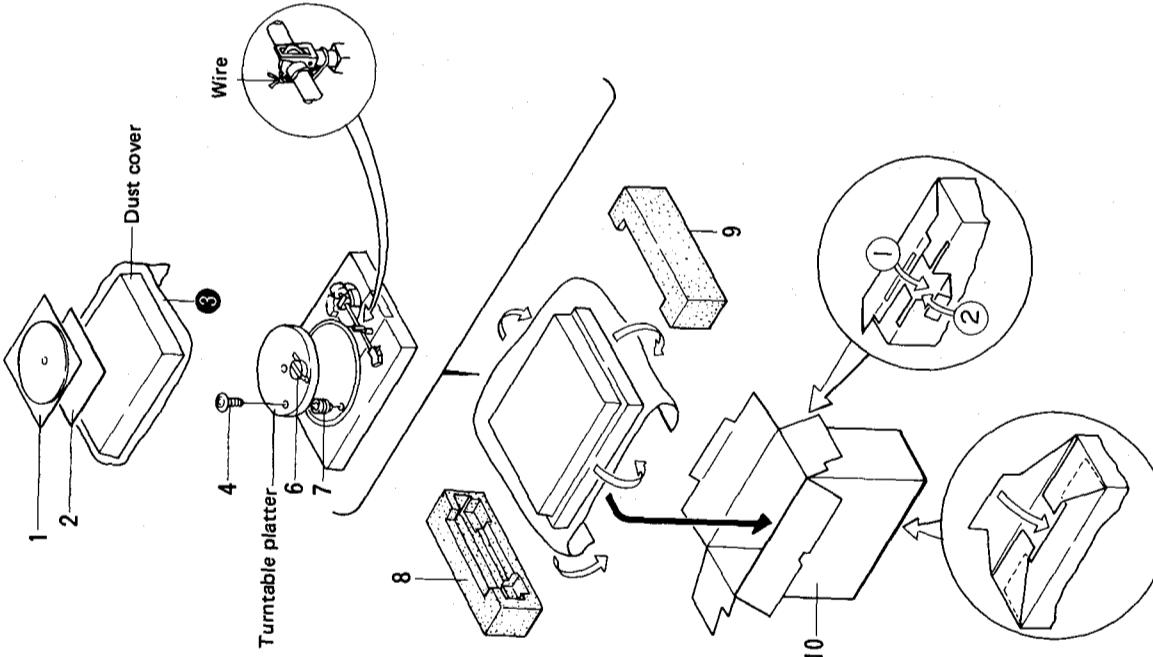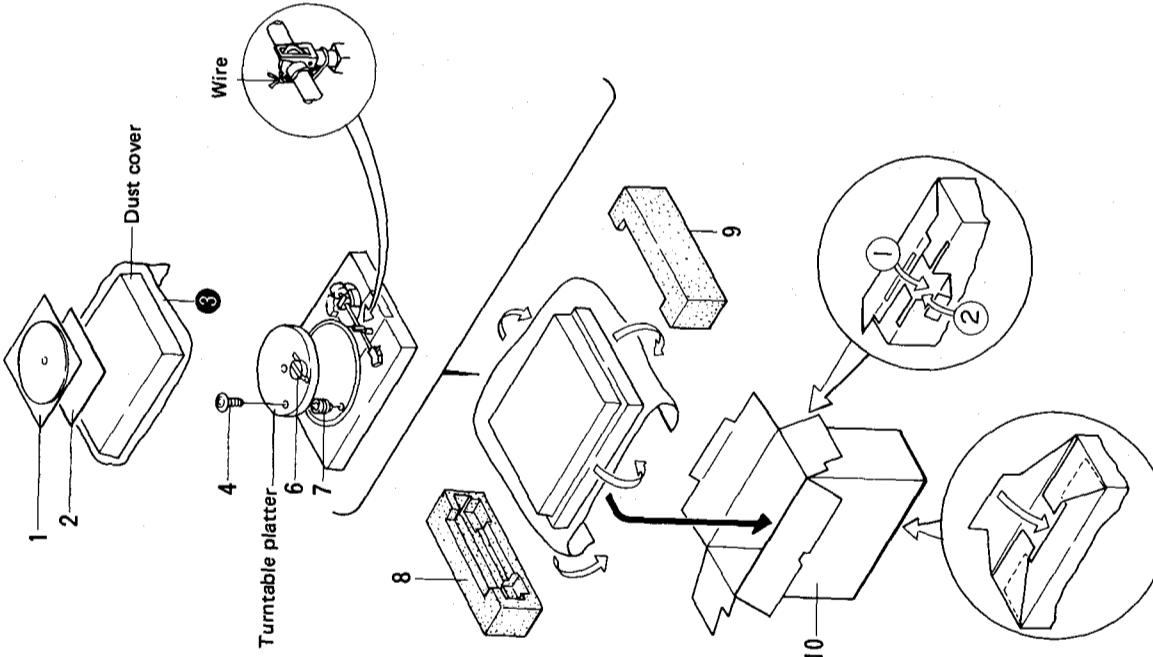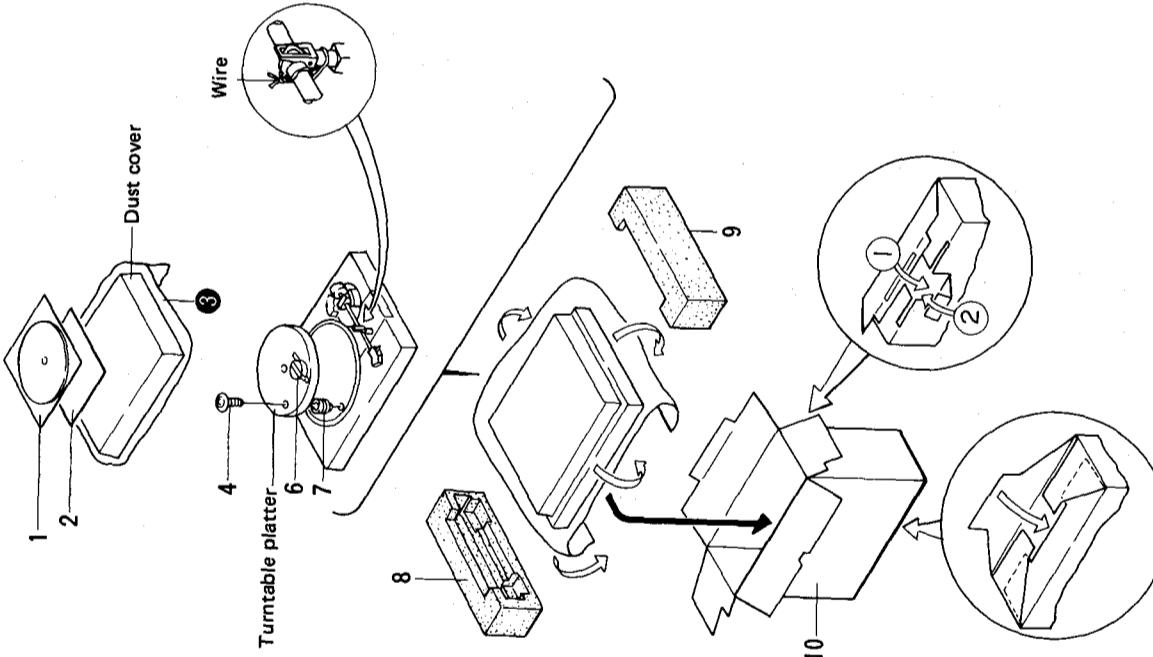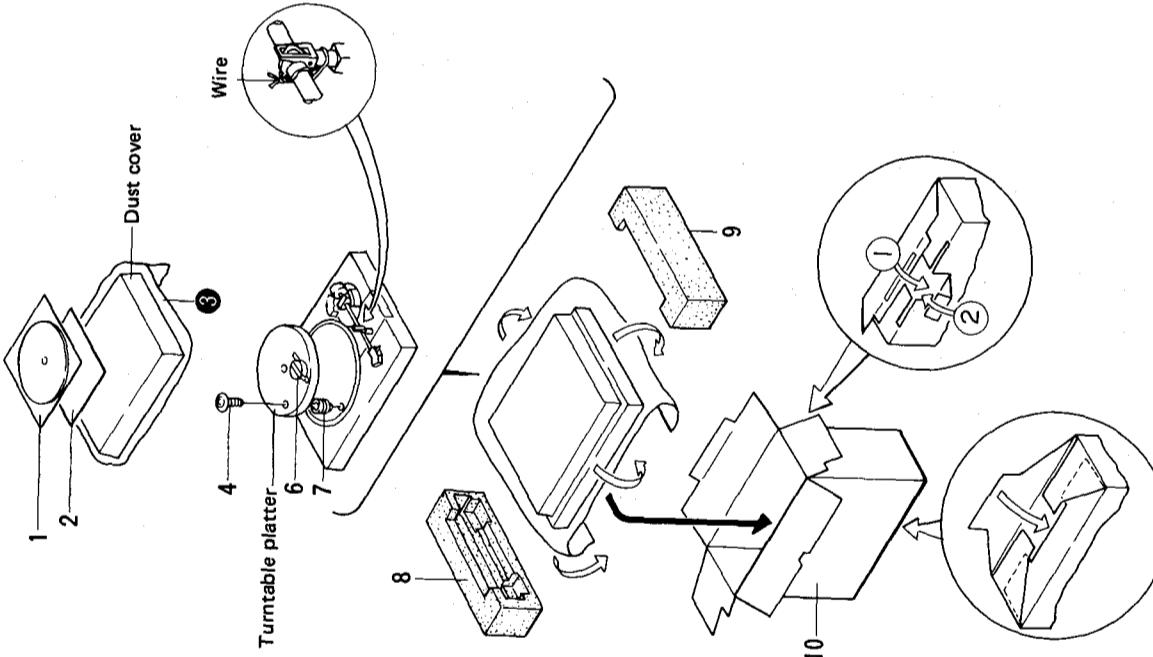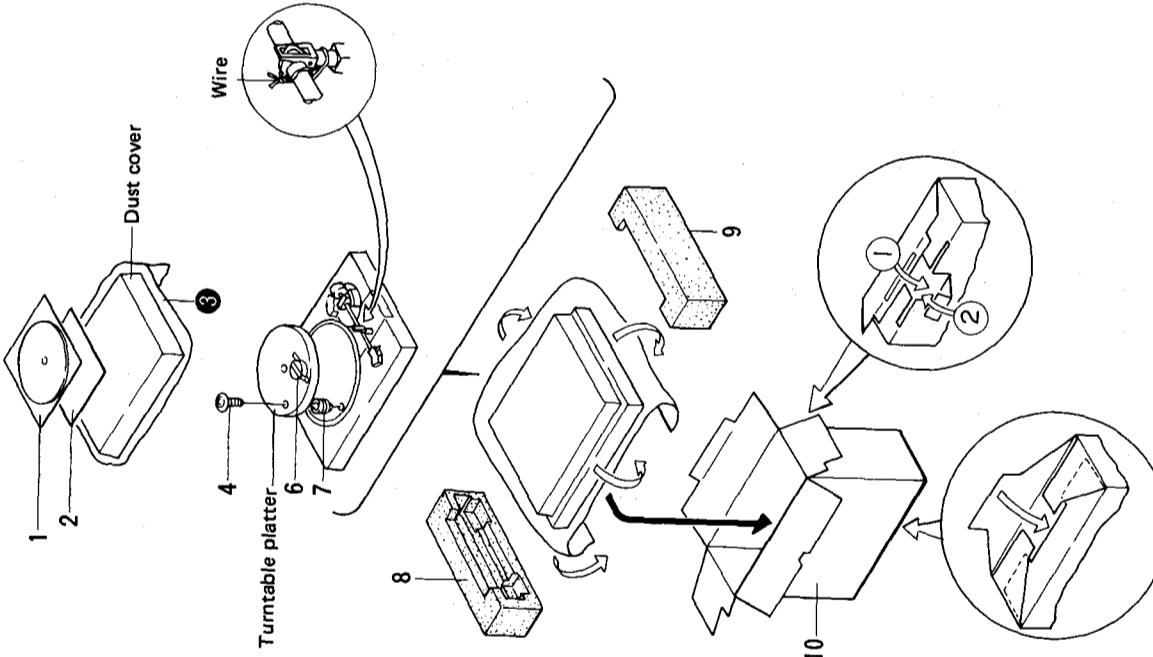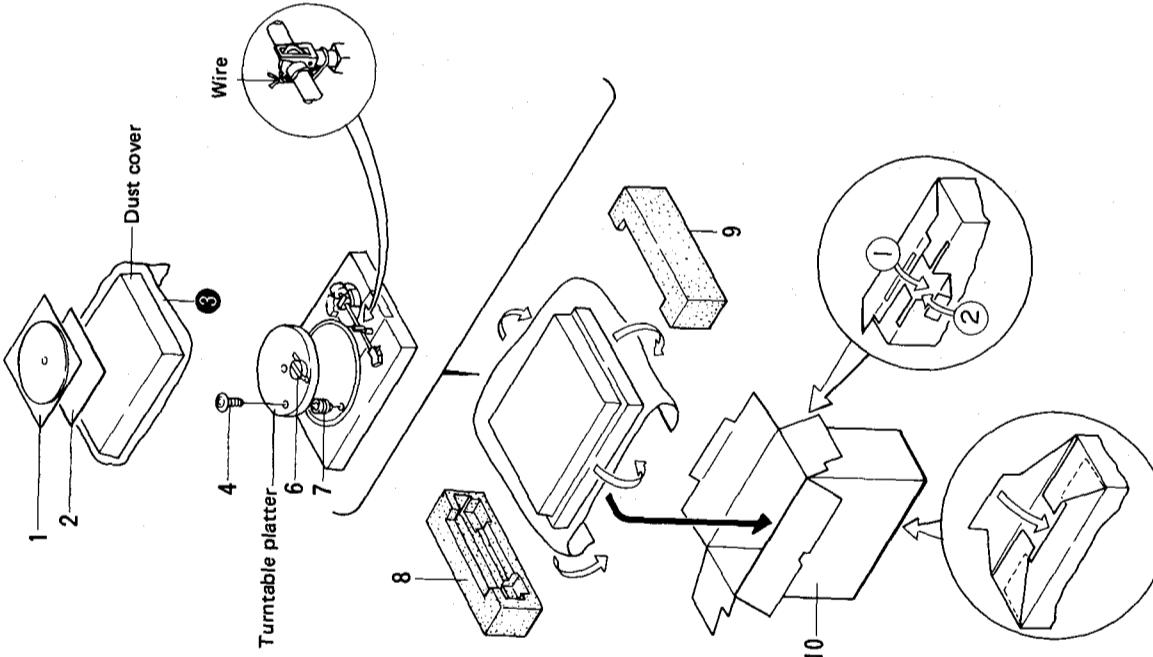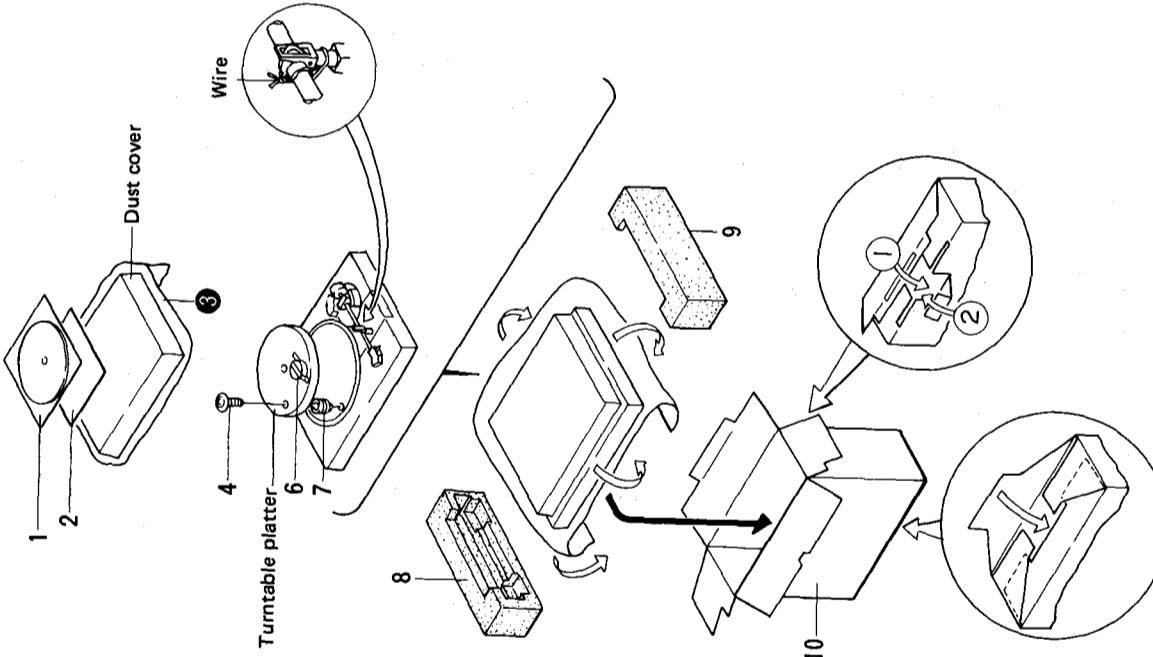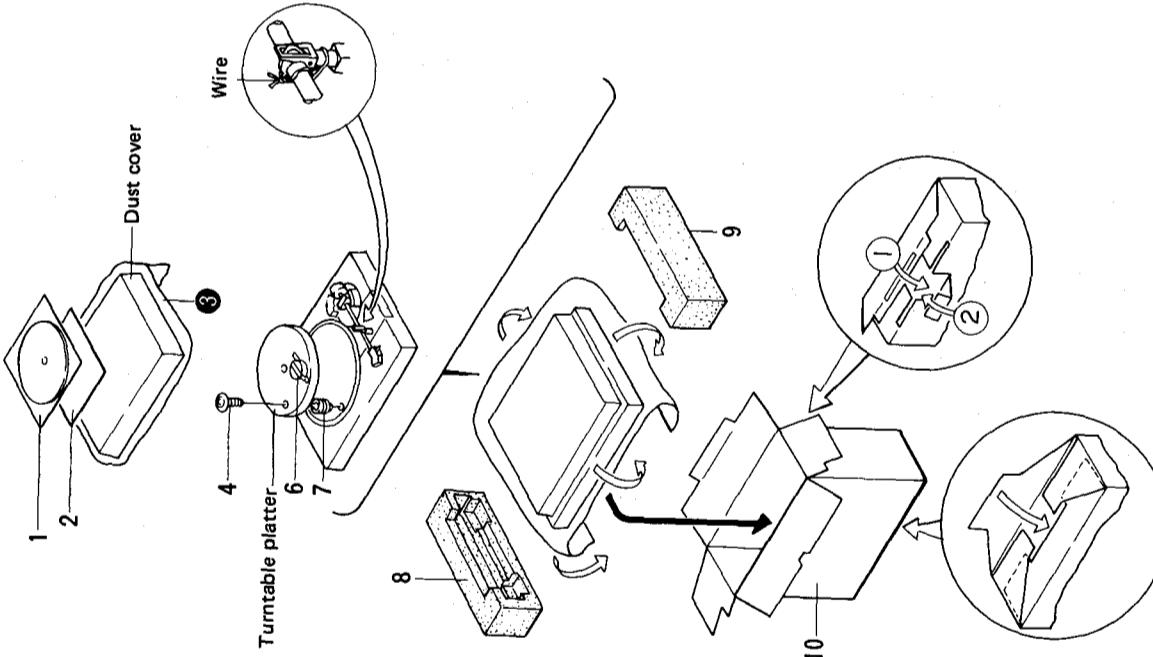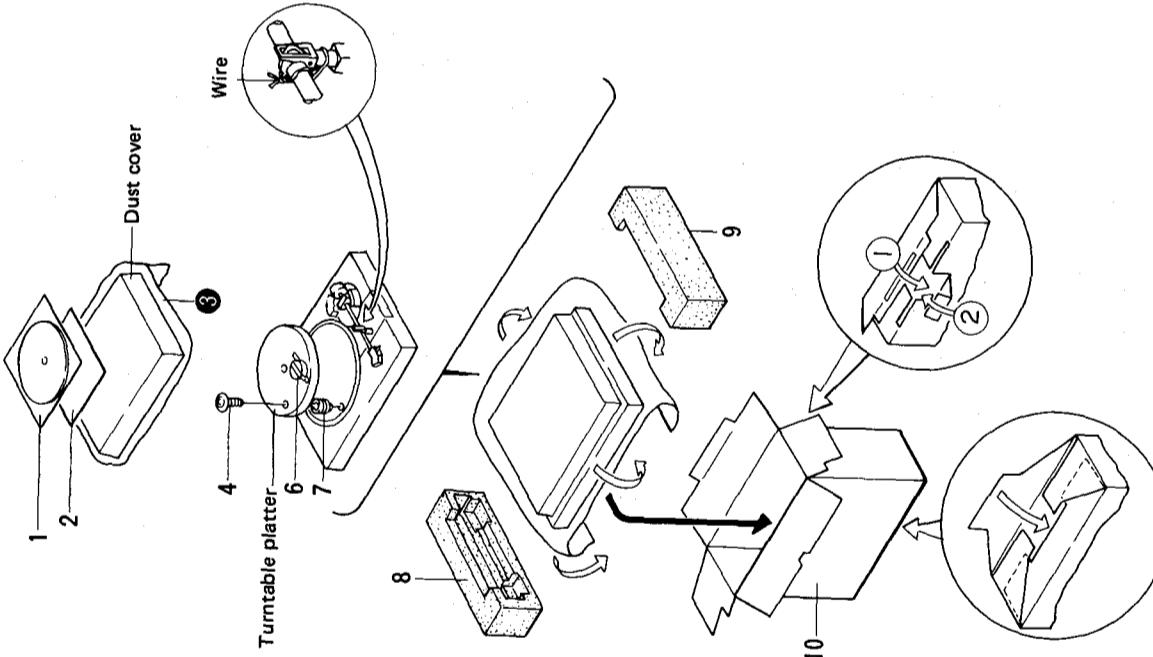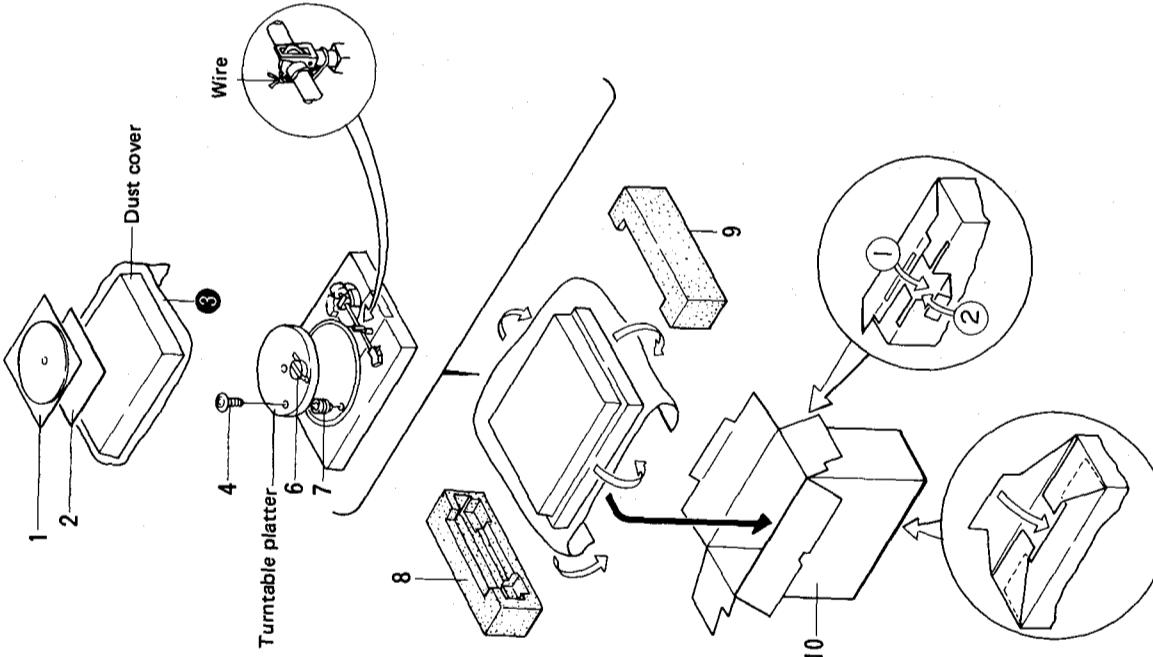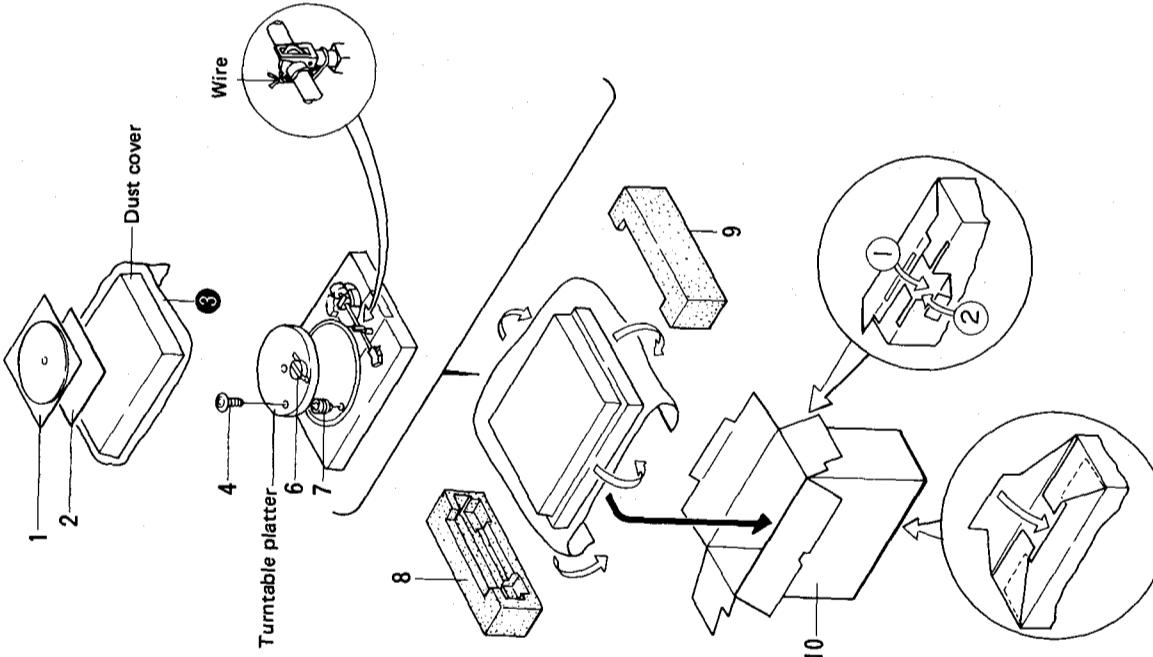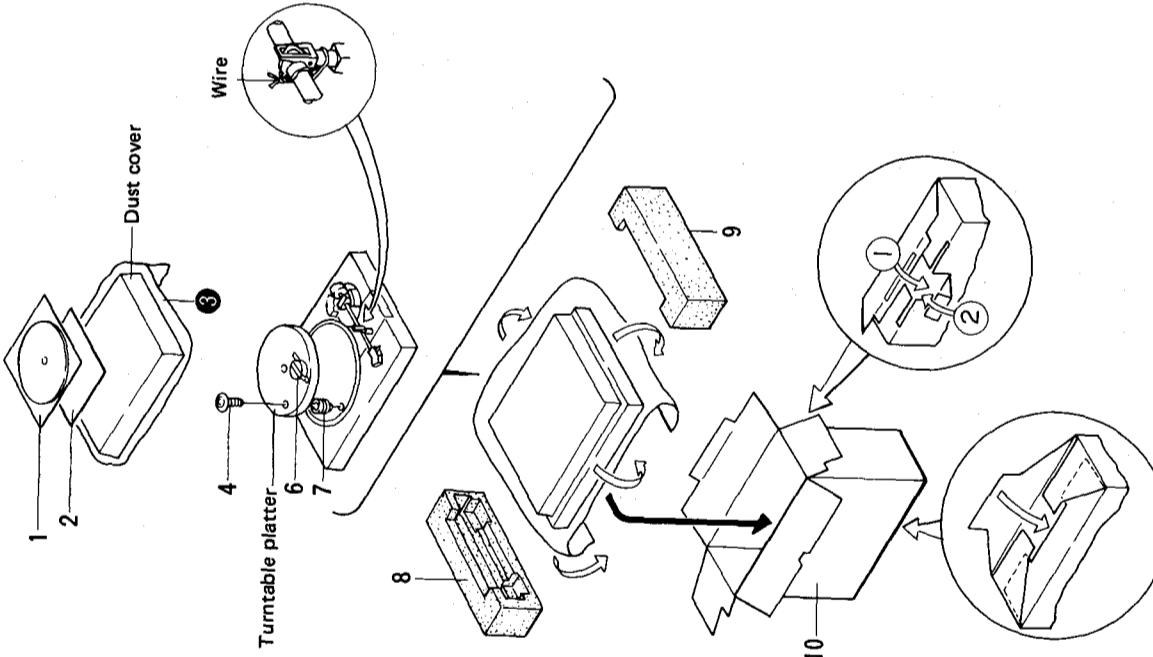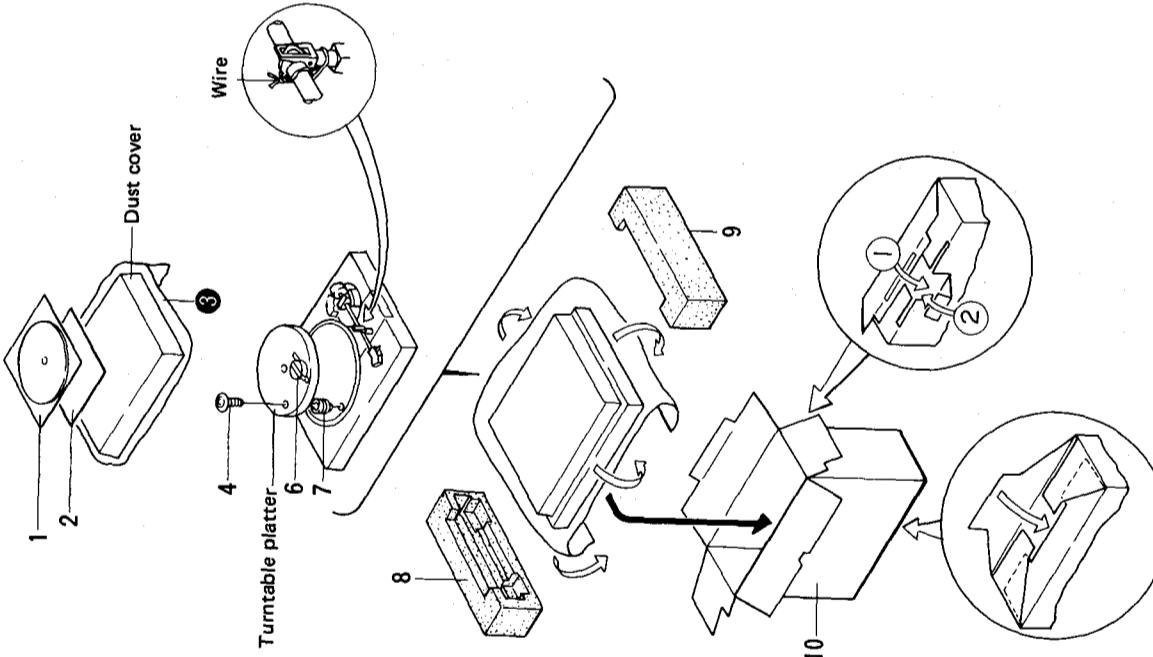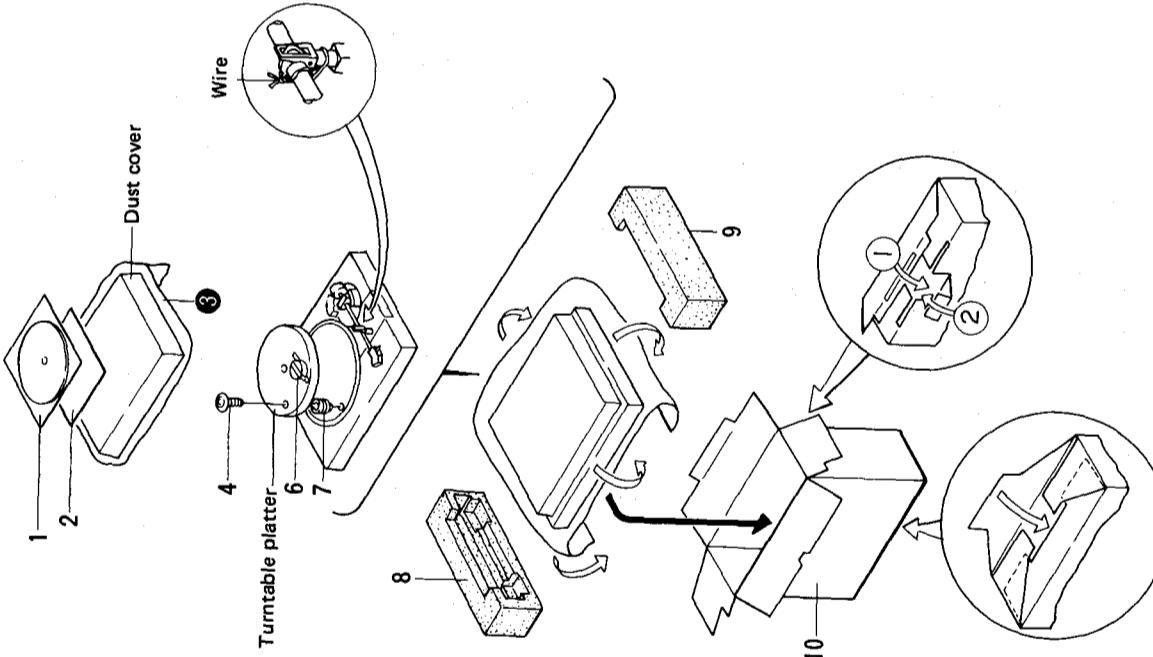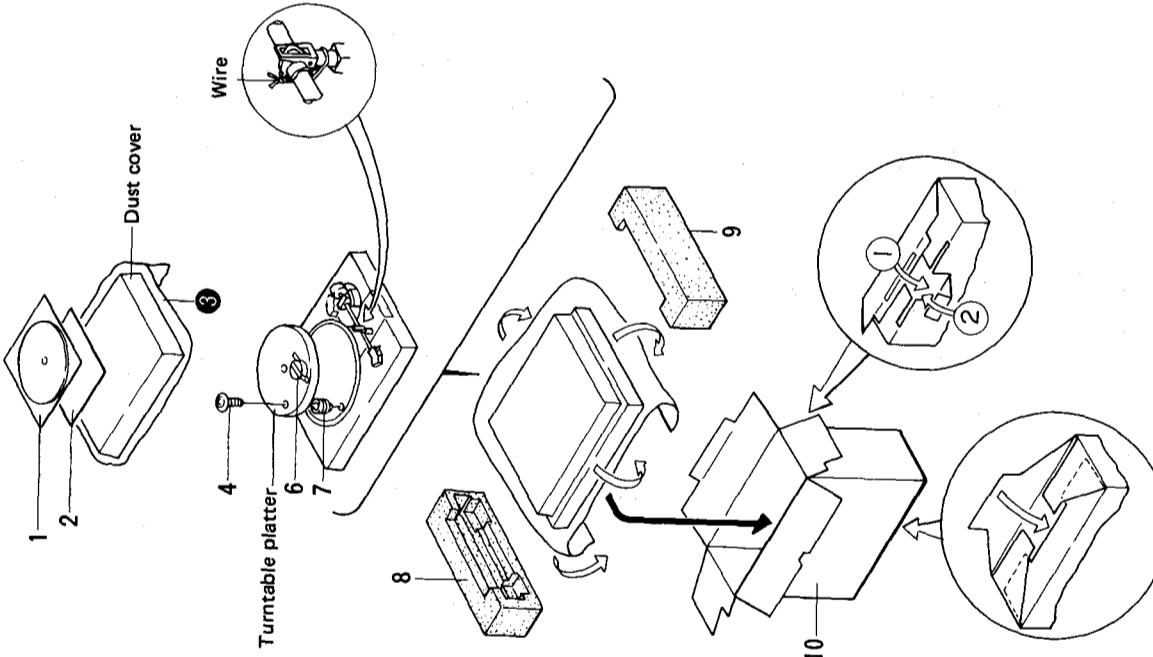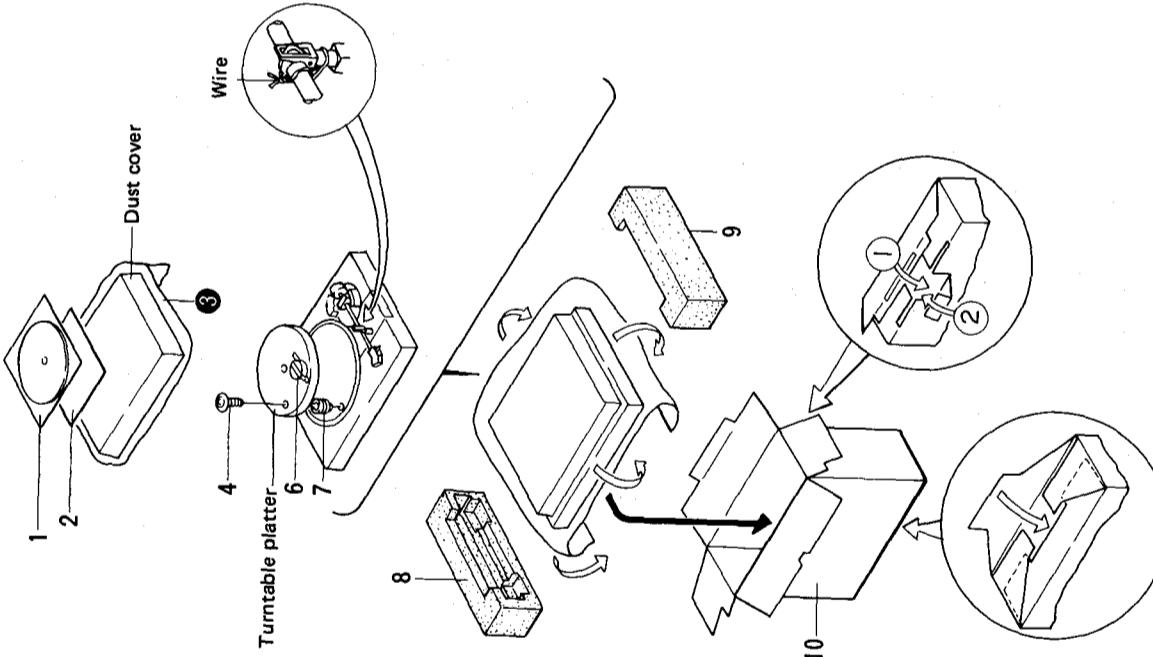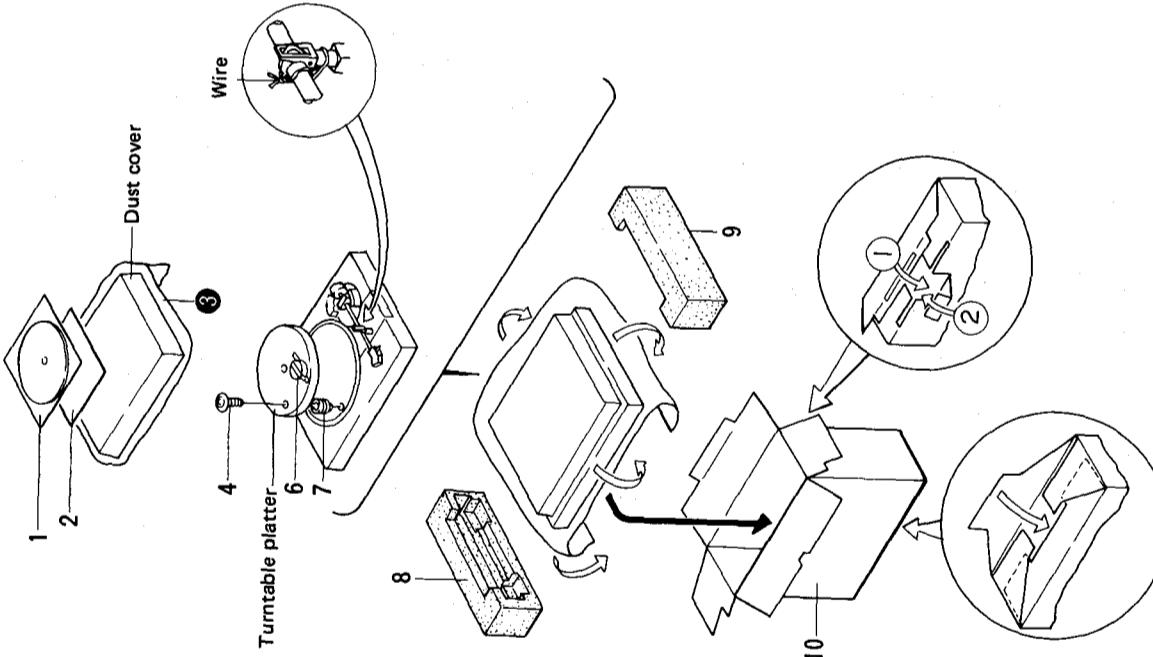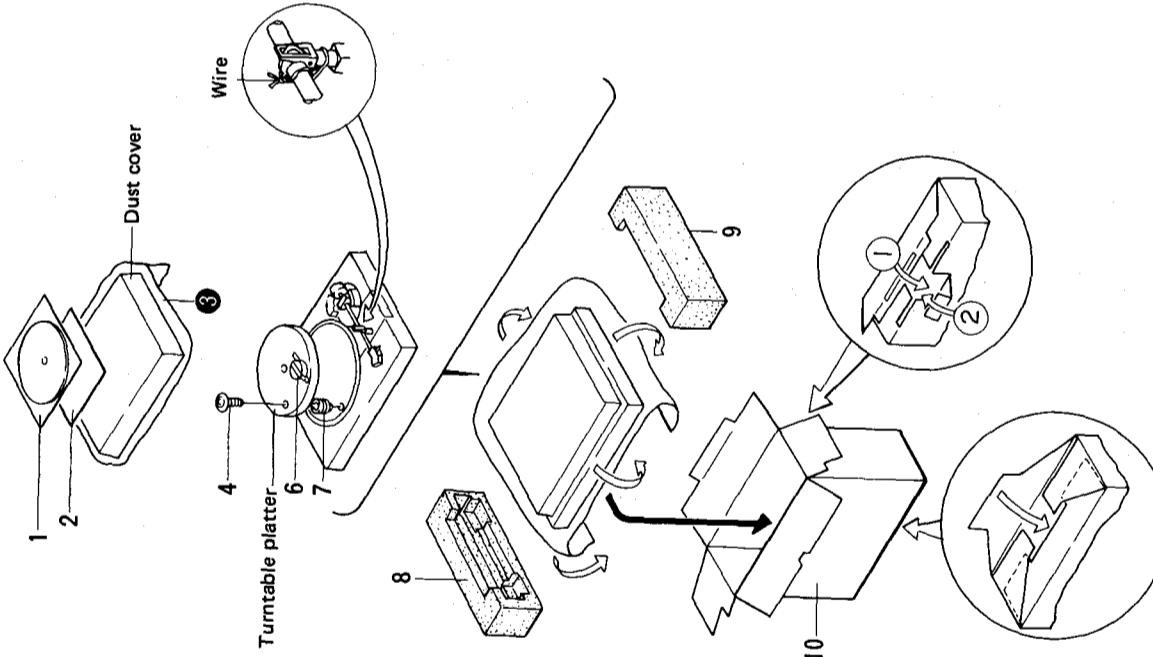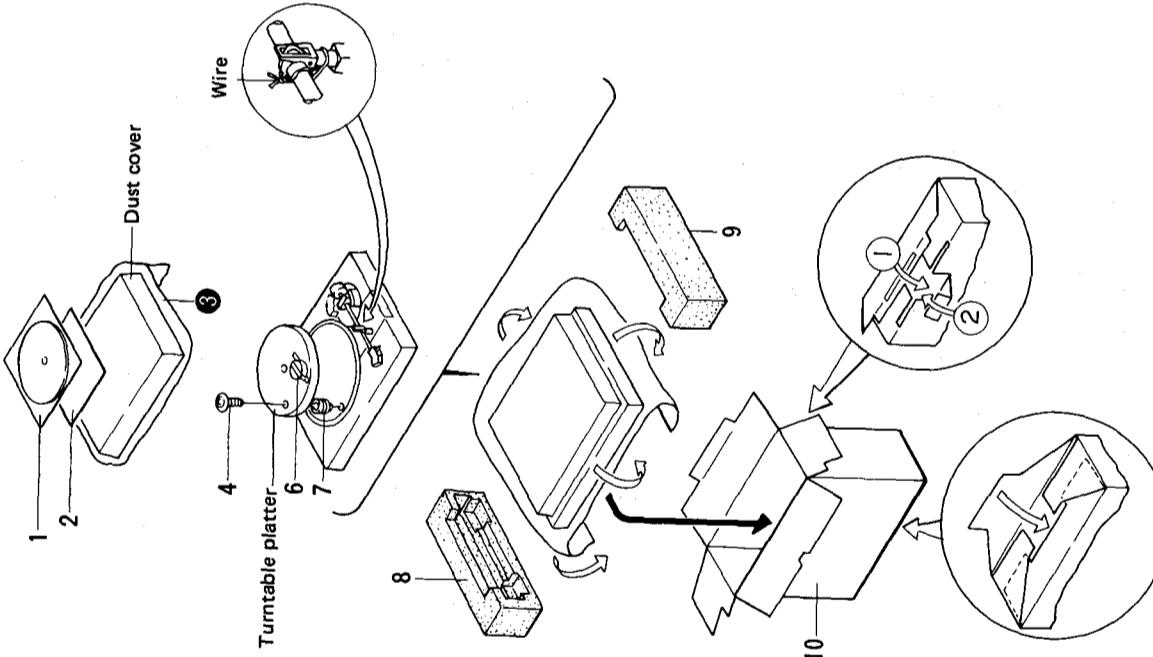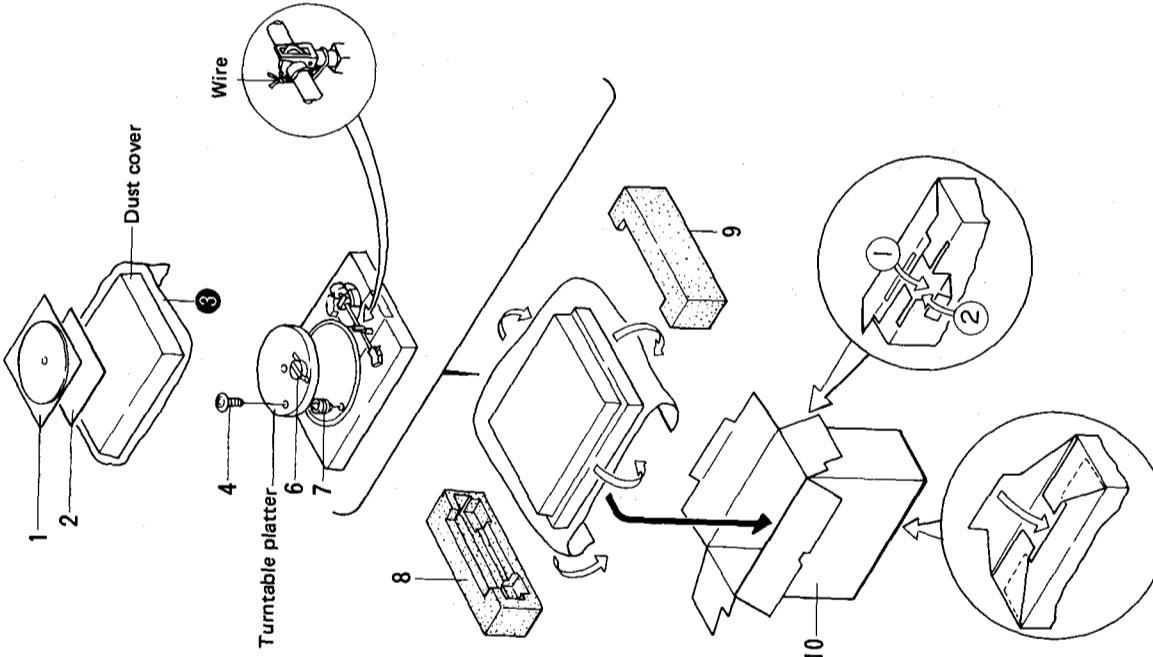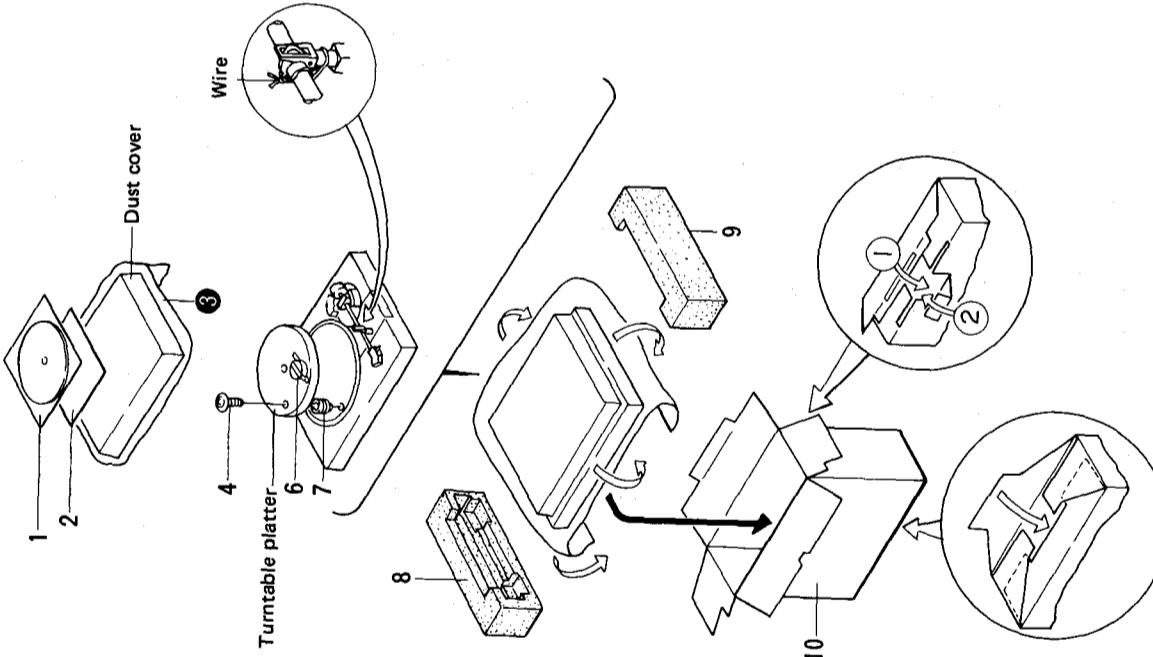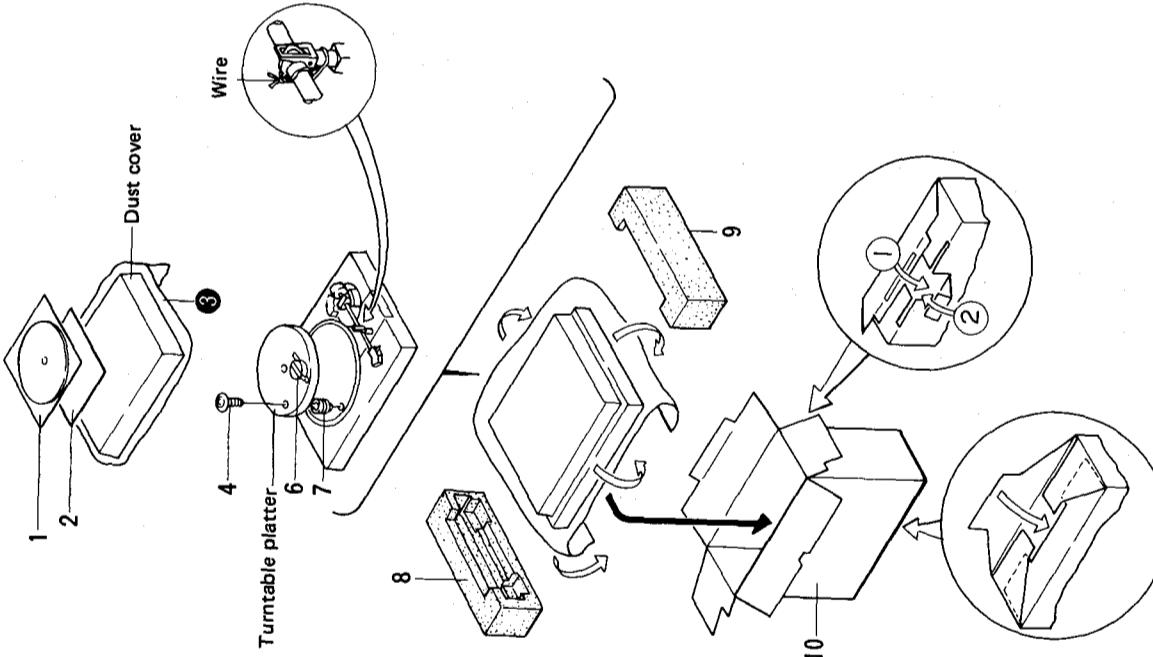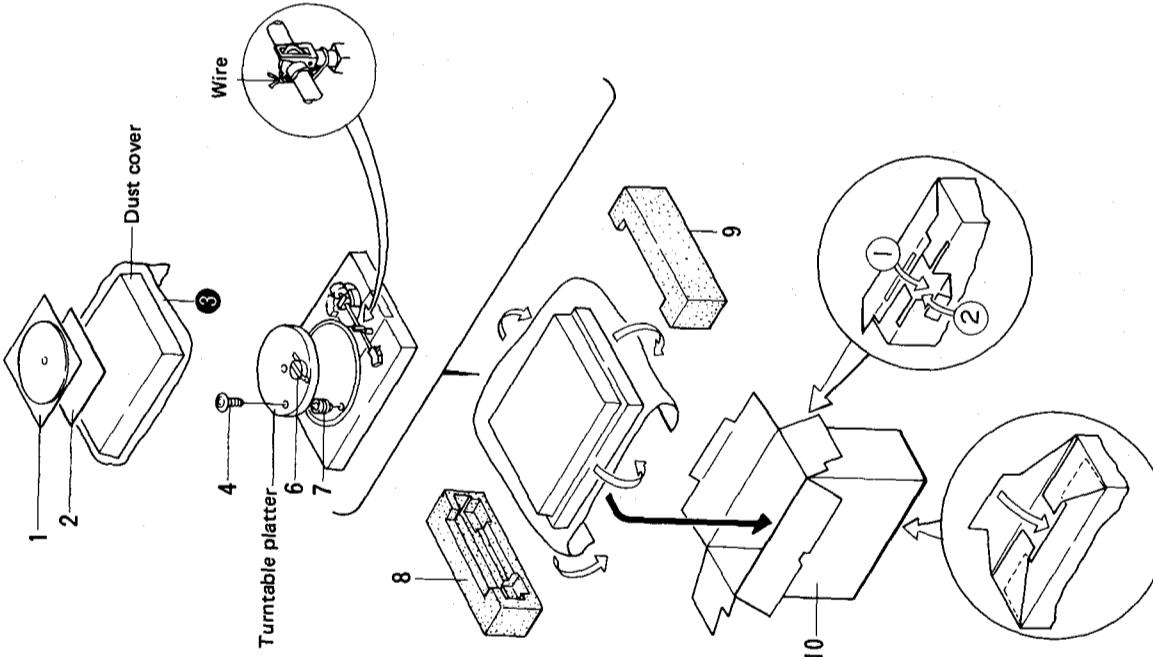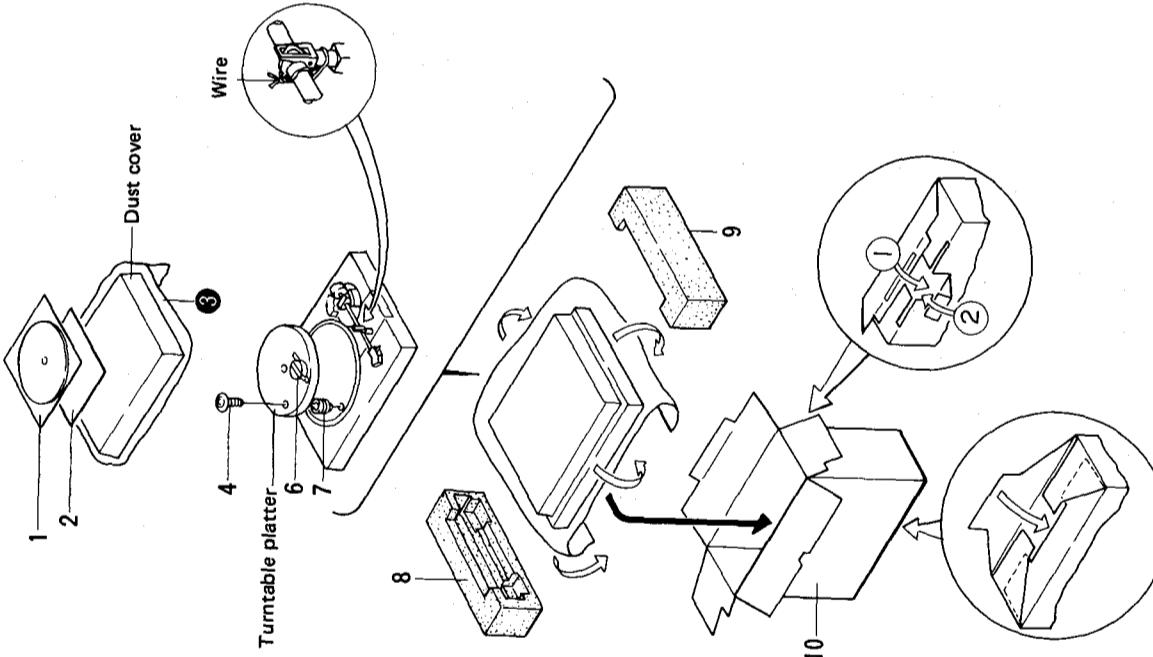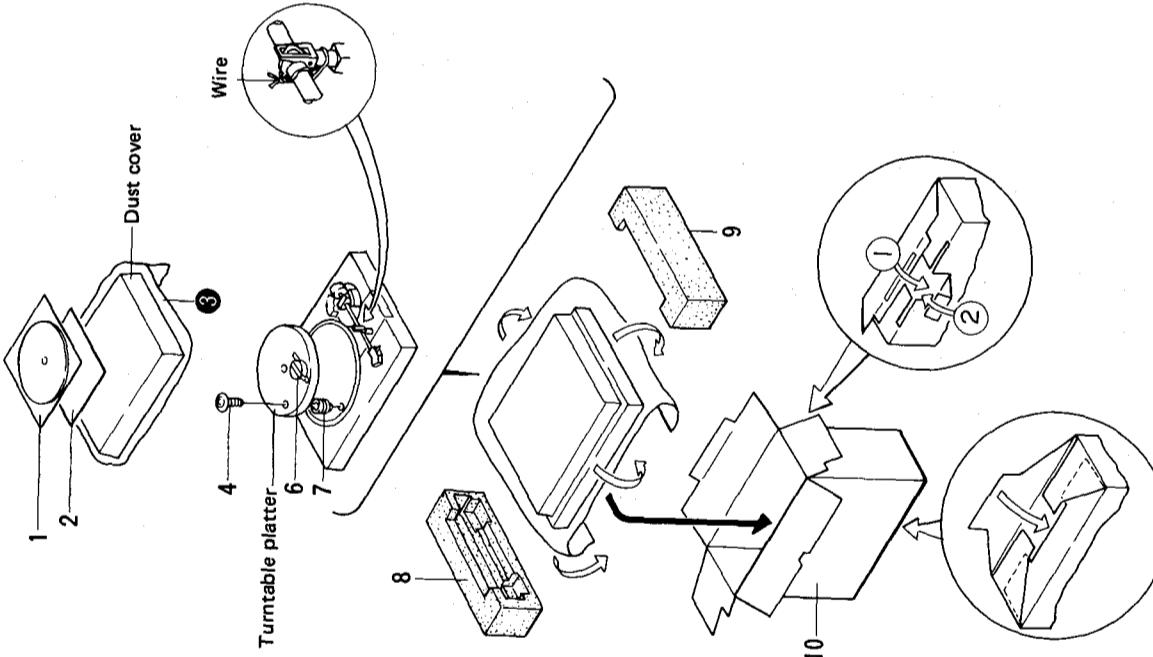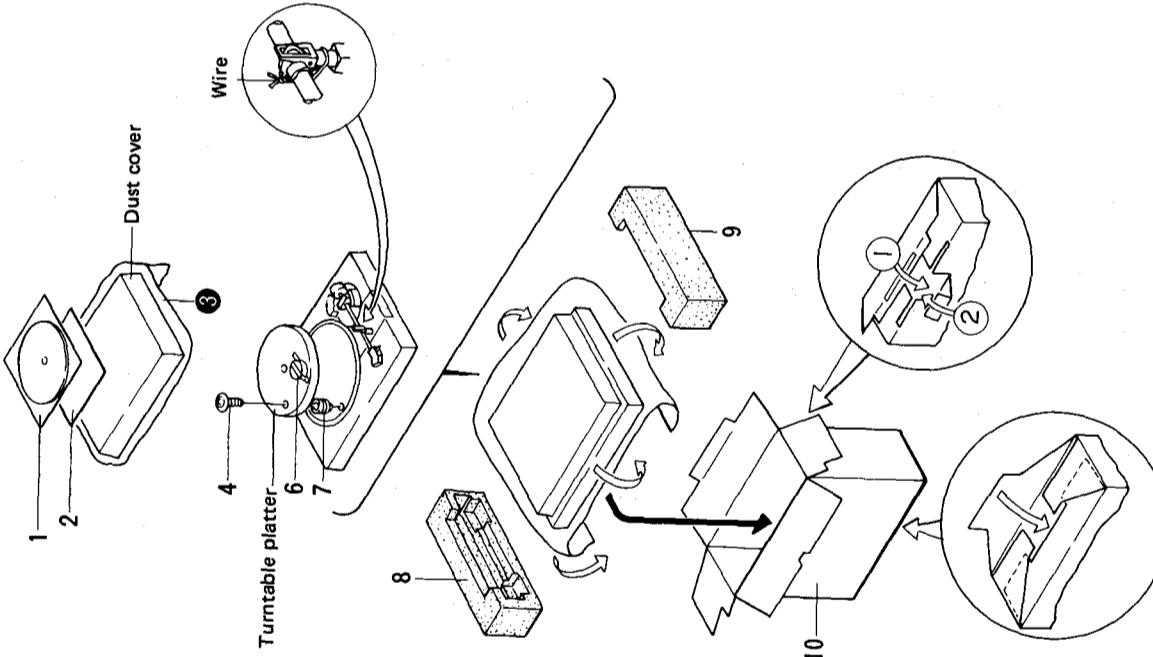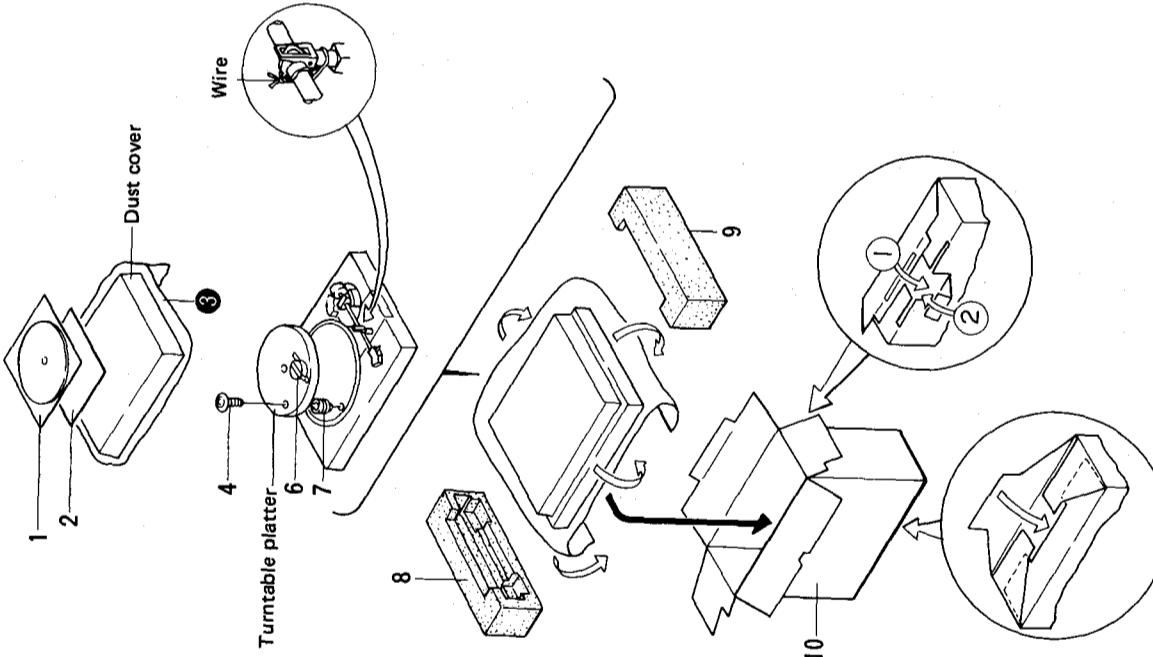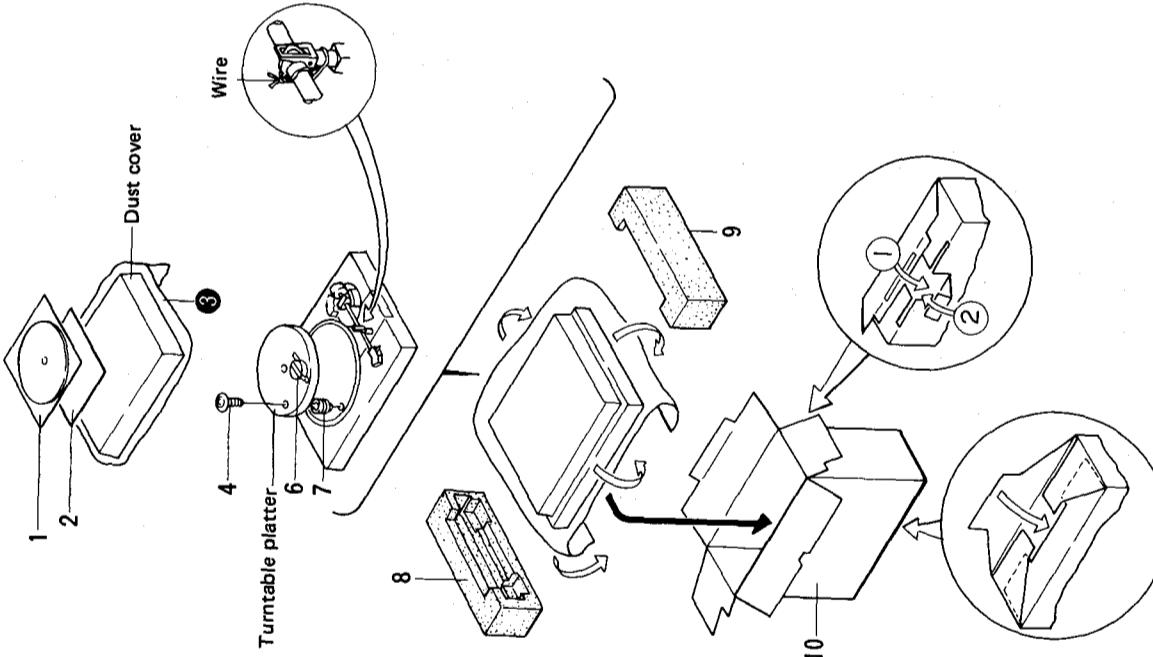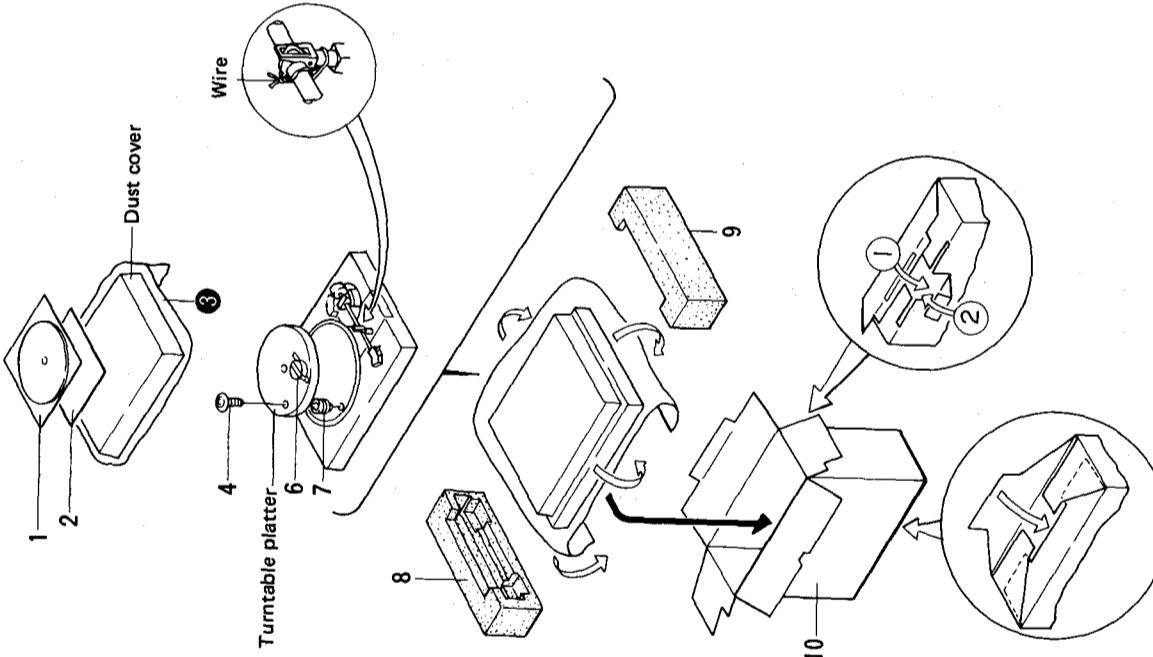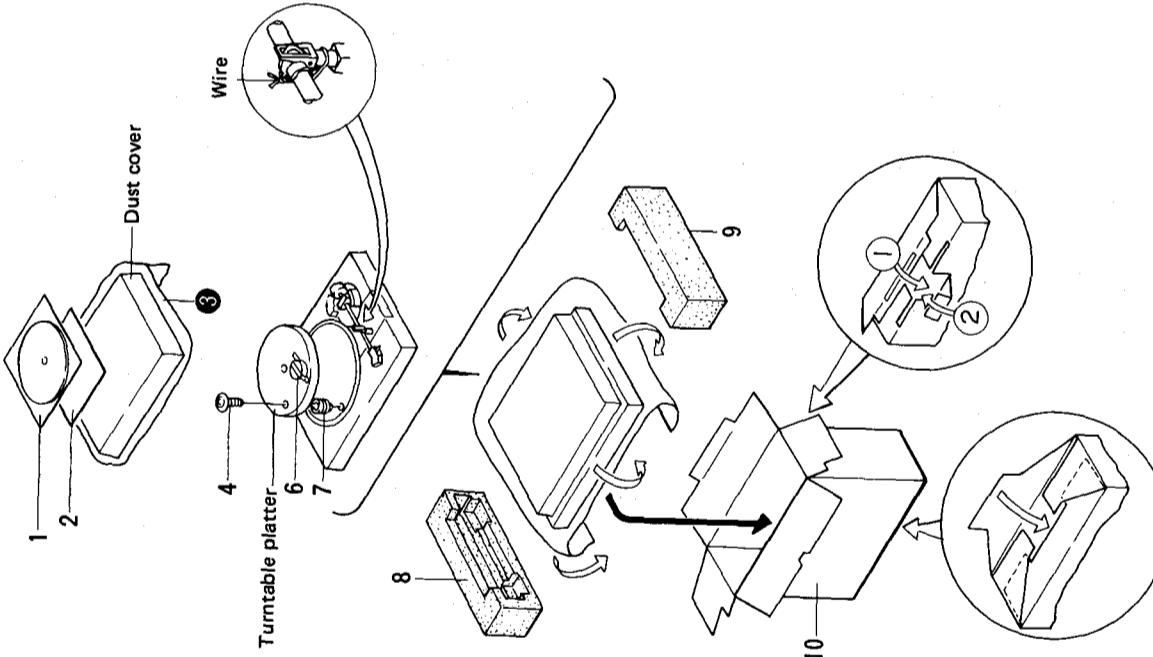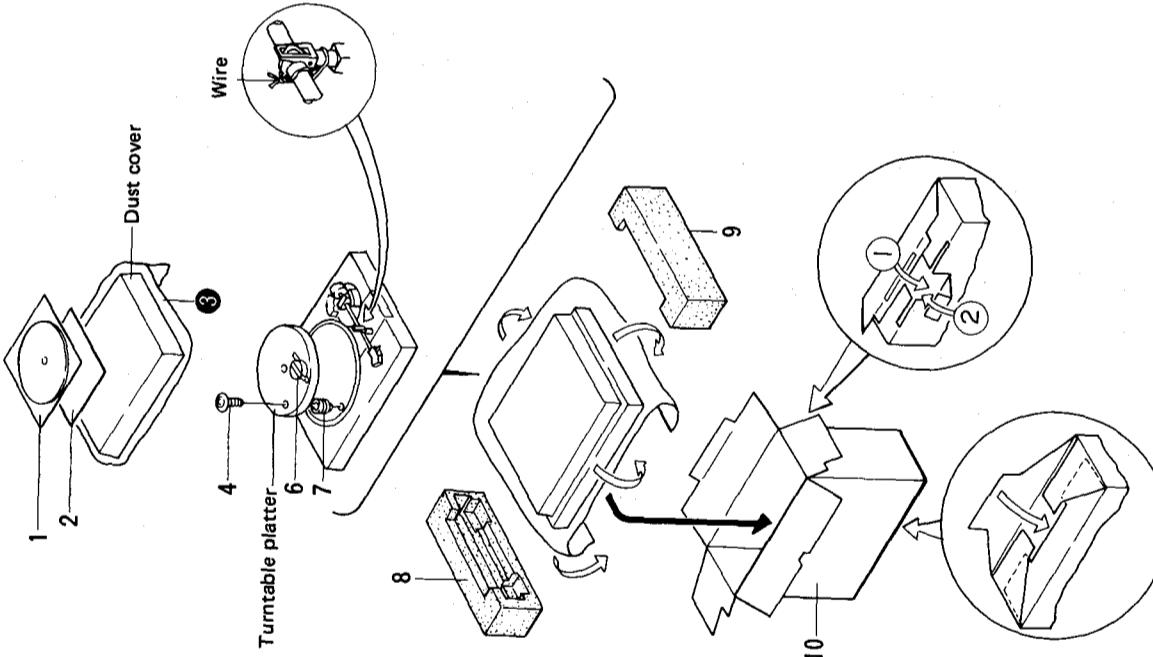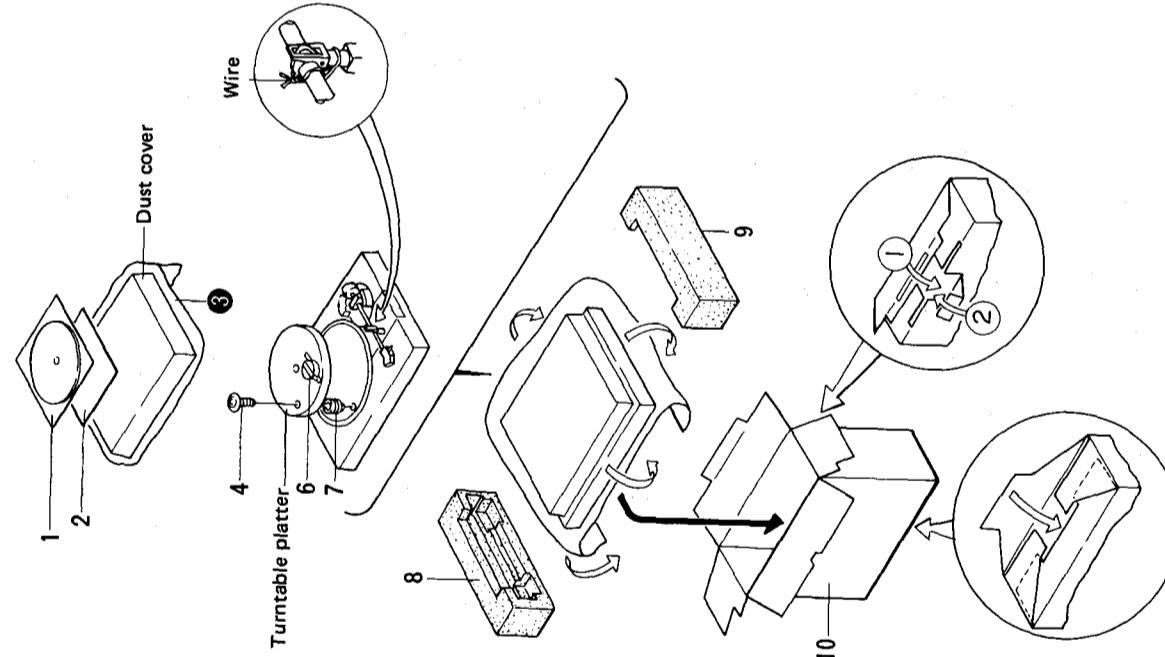

- **Elevation Cam Section**
Apply grease to the elevation cam and sliding section of the raising shaft to decrease the burden when operated.

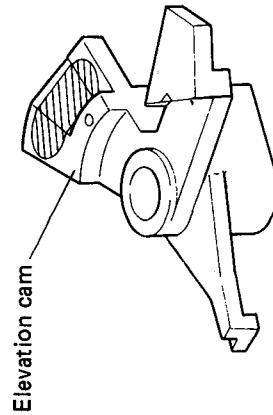


Fig. 9-5 Elevation cam section

9.2 PRECAUTIONS FOR ATTACHMENT OF PARTS AND REASSEMBLY

- **Cam Assembly Attachment**

The cam assembly is attached by letting the lock plate go in the direction **(A)** as shown in Fig. 9-6.

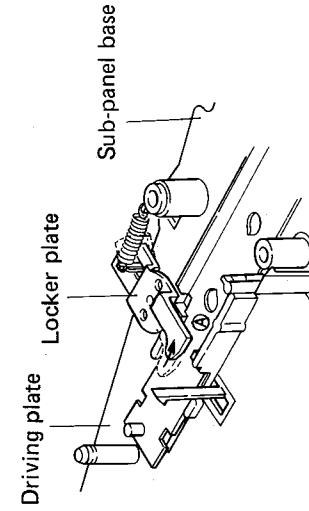


Fig. 9-6 Cam assembly attachment

- **Arm Base Attachment**
When attaching the arm base section to the mechanism section, put the mechanism section switch locker and switch lever in the locked position and verify that the tonearm is in the arm rest location. Also check that the PU plate shaft is in the position shown in Fig. 9-7.

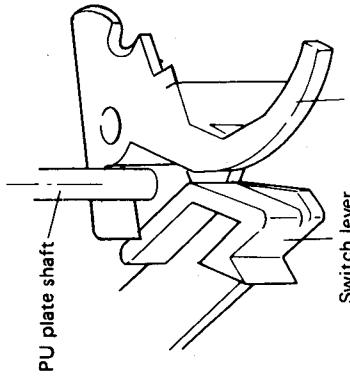


Fig. 9-7 Arm base attachment

- **PU Plate Assembly Attachment**

The PU plate assembly is attached by pushing the PU plate bearing section against the arm rotating shaft fixing nut. The attachment direction is matched to the center of the support line as shown in Fig. 9-8 (tone arm position on the arm rest).

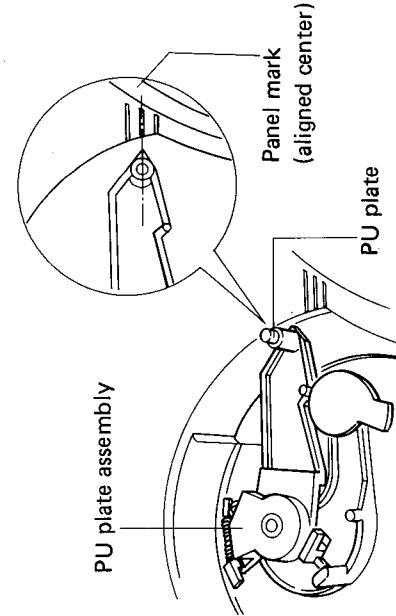


Fig. 9-8 PU plate attachment

● **PU lead Wire Position Confirmation**

When attaching the mechanism ass'y to the panel, be careful that the PU lead wire is not pinched at the panel boss as shown in Fig. 9-9.

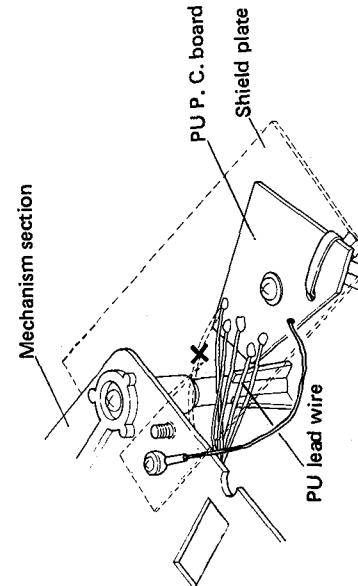


Fig. 9-9 PU lead wire attachment

● **Installing The Cords**

When installing the PU lead wire and DC power cord, install them to the panel with string as shown in Fig. 9-10.

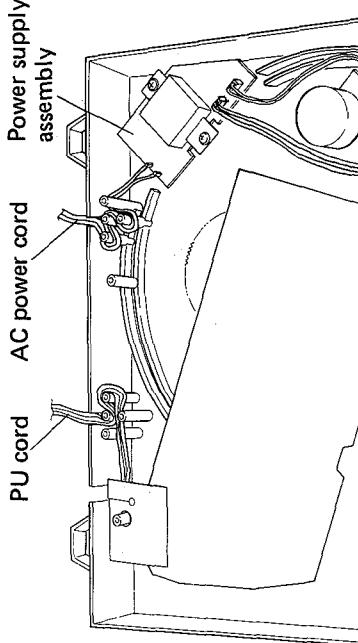


Fig. 9-10 Cords stringing

10. ADJUSTMENTS

10.1 AUTO-RETURN ADJUSTMENT

● **Auto-Return Position Adjustment**
When auto-return occurs too early or too late, make the following adjustments.

1. Check the stylus landing position. If the stylus does not land at the correct position, adjust the landing position.
2. Set the arm elevation switch to UP and turn the auto-return adjustment screw fully counter-clockwise.
3. Move the tone arm as far as it will go toward the inside.
4. When the auto-return adjustment screws is turned slowly clockwise, the tone arm will begin to move toward the inside.
5. Stop turning the adjustment screw at the point at which there is a space of 32 mm between the cartridge stylus and the center shaft. (Fig. 10-1)
6. After adjustment, check that auto-return is performed correctly and that the stylus landing position is correct.


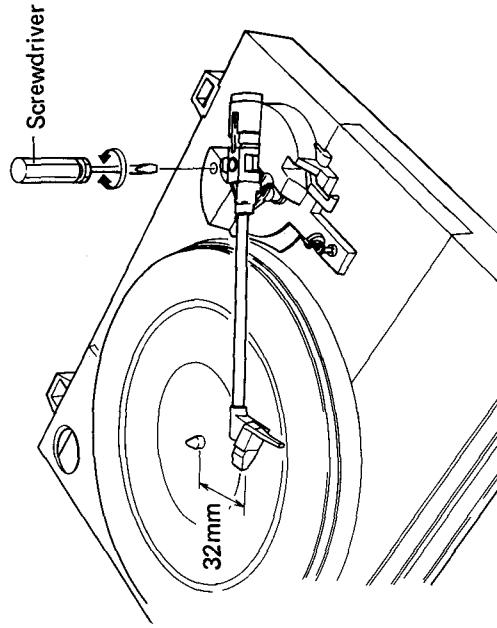


Fig. 10-1 Auto-return adjustment

10.2 ARM-ELEVATION ADJUSTMENT

● Arm Elevation Height Adjustment

1. Turn the arm elevation lever up to raise the tone arm.
2. Adjust the screw so that stylus is 23 mm above the panel. When the adjustment screw is turned counterclockwise, the stylus lowers.

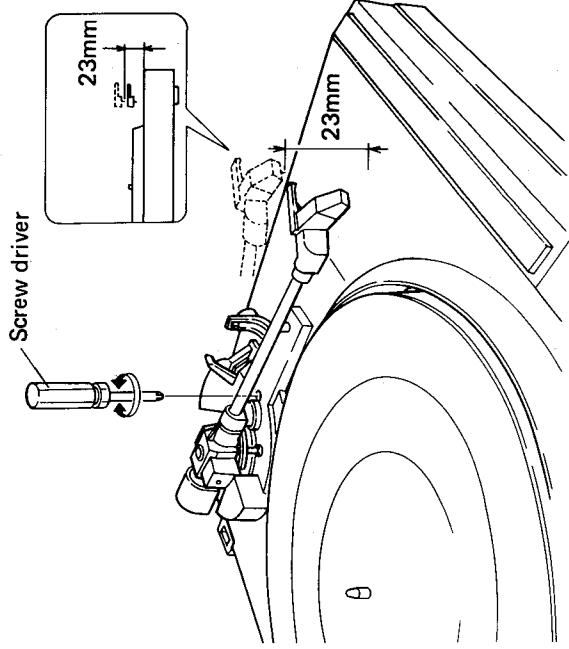

10.3 MOTOR ADJUSTMENTS

Place the record player on blocks as shown in Fig. 10-3 and adjust the motor from the under base.

1. Turn the arm elevation lever up to raise the arm.
2. Place a strobo sheet on the turntable, move the arm to the turntable side, and rotate the turntable.
3. Adjust semifixed resistors VR1 and VR2 of the motor ass'y so the strobo of the strobo sheet appears to the static.
4. First adjust VR2 for 33 1/3 rpm and then adjust VR1 for 45 rpm.

Fig. 10-2 Arm-elevation adjustment

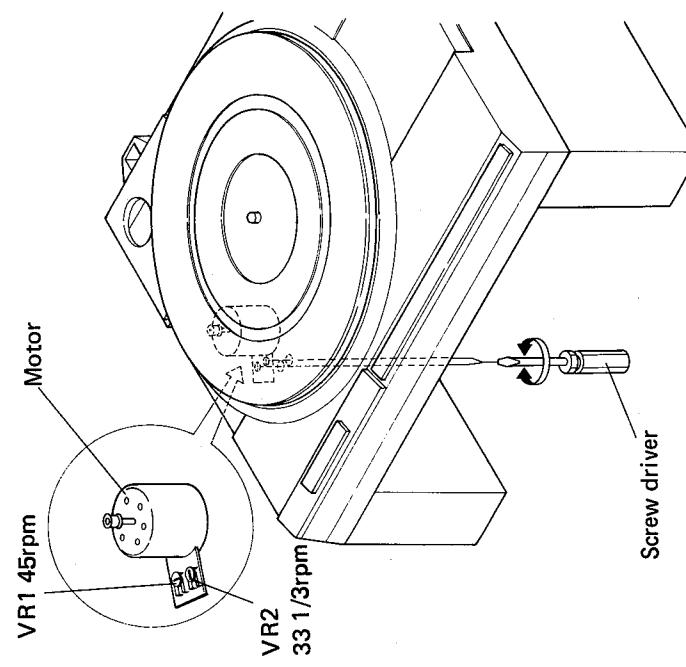


Fig. 10-3 Motor adjustment

10. RÉGLAGE

10.1 RÉGLAGE DE RETOUR AUTOMATIQUE

• Réglage de la position de retour automatique

Réaliser les réglages suivants lorsque le retour automatique se produit tôt ou trop tard.

1. Contrôler la position de descente de la pointe de lecture. Si la pointe de lecture ne descend pas sur la position correcte, ajuster la position de descente.

2. Régler la touche de relevage du bras sur la position "UP" et tourner la vis de réglage du retour automatique à fond dans le sens contraire des aiguilles d'une montre.

3. Déplacer le bras de lecture le plus possible vers l'inférieur.

4. Lorsque la vis de réglage du retour automatique est tournée lentement dans le sens des aiguilles d'une montre, le bras de lecture commence à se déplacer vers l'intérieur.

5. Arrêter de tourner la vis de réglage sur le point pour lequel il y a un écart de 32mm entre la pointe de lecture et l'axe central (Fig. 10-1)

6. Après le réglage, vérifier que le retour automatique se réalise correctement et que la position de descente de la pointe est correcte.

10.2 RÉGLAGE DE RELEVAGE DU BRAS LECTURE

• Réglage de la hauteur de relevage du bras de lecture

1. Tourner le levier de relevage du bras pour soulever le bras de lecture.
2. Régler la vis de sorte que la pointe de lecture se situe à 23 mm au-dessus du panneau. Lorsqu'on tourne la vis de réglage dans le sens contraire des aiguilles d'une montre, la pointe de lecture se baissera.

10.3 RÉGLAGE DU MOTEUR

Placer le tourne-disques sur des blocs, comme il est montré dans la Fig. 10-3 et régler le moteur depuis le dessous.

1. Tourner le levier de relevage du bras pour soulever le bras de lecture.
2. Placer une feuille stroboscopique sur le tourne-disques; déplacer le bras jusqu'au côté du tourne-disques et le faire tourner.
3. Régler les résistances demi-fixes VR1 et VR2 de l'ensemble du moteur, jusqu'à ce que la feuille stroboscopique apparaît immobile.
4. D'abord régler VR2 pour avoir la vitesse de 33 1/3 tr/min, ensuite, régler VR1 pour 45 tr/min.

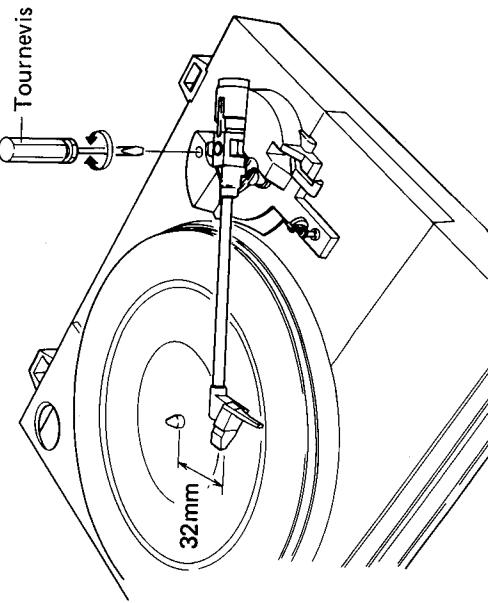


Fig. 10-1 Réglage de retour automatique

10. AJUSTE

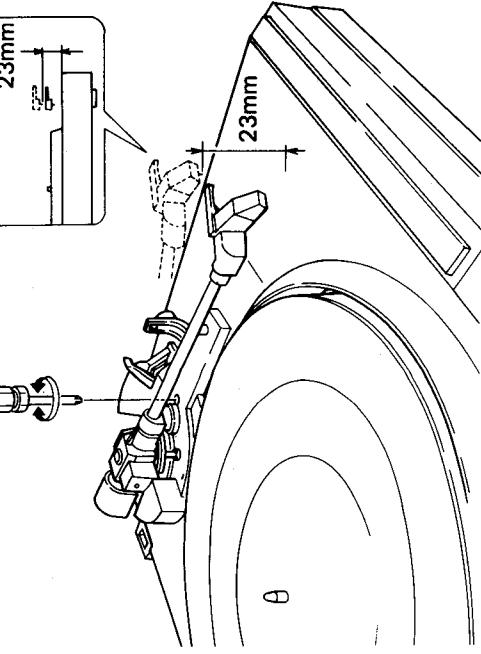


Fig. 10-2 Réglage de relevage du bras de lecture

10.1 AJUSTE DE RETORNO AUTOMÁTICO

- **Ajuste de la posición de retorno automático**

Cuando el retorno automático se produce demasiado rápido o demasiado tarde, efectuar los ajustes siguientes.

1. Comprobar la posición de descenso de la aguja. Si la aguja no desciende en la posición correcta, ajustar la posición de descenso.
2. Ajustar el interruptor de elevación del brazo en la posición UP y girar el tornillo de ajuste de retorno automático completamente hacia la izquierda.
3. Desplazar el brazo fonocaptor hacia el interior al máximo.
4. Cuando se giran lentamente los tornillos de ajuste de retorno automático hacia la derecha, el brazo fonocaptor empleará a moverse hacia el interior.
5. Dejar de girar el tornillo de ajuste en el punto en el que haya un espacio de 32mm entre la aguja de la cápsula y el eje central. (Fig. 10-1)
6. Después del ajuste, comprobar que la operación de retorno automático se efectúe correctamente y que la posición de descenso de la aguja sea la correcta.

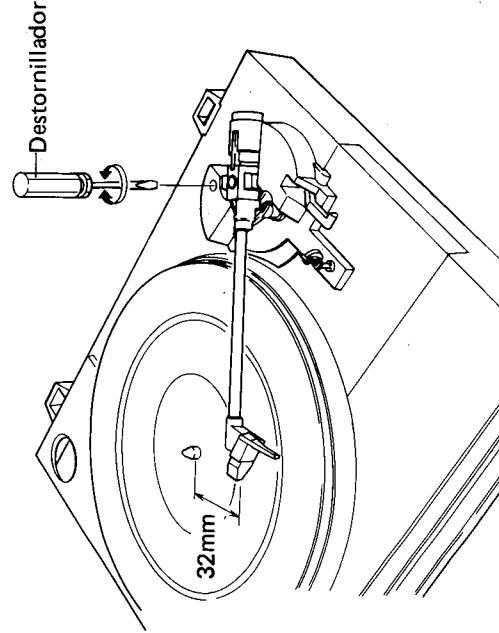


Fig. 10-1 Ajuste de retorno automático

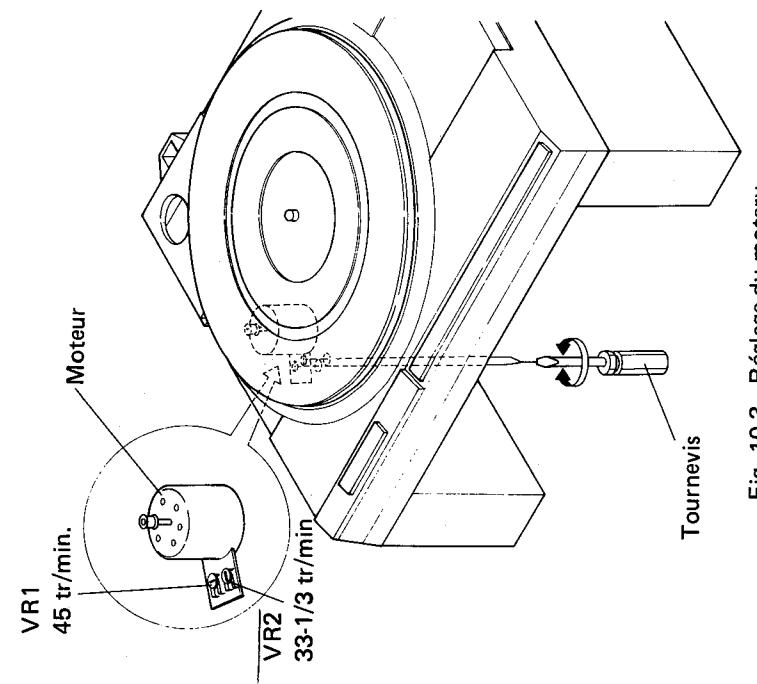


Fig. 10-3 Réglage du moteur

10.2 AJUSTE DE LA ELEVACIÓN DEL BRAZO

● Ajuste de la altura de la elevación del brazo

1. Girar la palanca de elevación del brazo para elevar el brazo fonocaptor.
2. Ajustar el tornillo de modo que la aguja quede 23 mm por encima del panel. Al girar el tornillo de ajuste en el sentido contrario de las manecillas del reloj, se abaja la aguja.

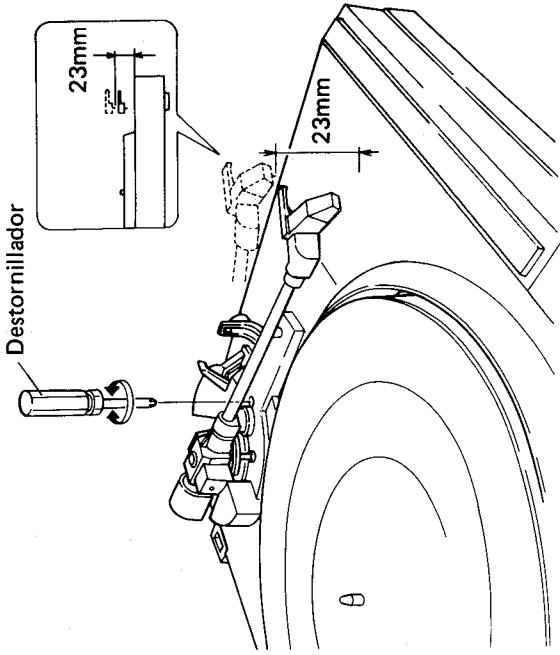


Fig. 10-2 Ajuste de la elevación del brazo

10.3 AJUSTES DEL MOTOR

Poner el giradiscos sobre bloques como se muestra en la Fig. 10-3 y ajustar el motor desde abajo.

1. Girar la palanca de elevación del brazo para elevar el brazo fonocaptor.
2. Poner una lámina estroboscópica sobre el plato, mover el brazo hacia el plato y hacer girar el plato.
3. Ajustar los resistores semifijos VR1 y VR2 del conjunto del motor de modo que el estrobo y la lámina estroboscópica parezcan parados.
4. Primero ajustar VR2 a 33 1/33 rpm luego VR1 a 45 rpm.

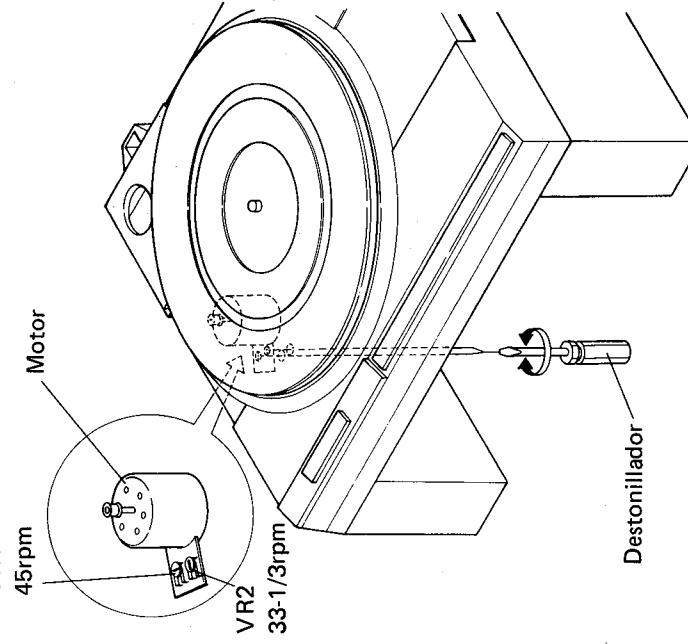


Fig. 10-3 Ajuste del motor

11. FOR PL-450/KC, R AND WEM TYPES

11.1 PL-450/KC TYPE

Model PL-450/KC type is the same as the PL-450/KU type with the exception of following sections.

MISCELLANEOUS PARTS

Mark	Symbol & Description	Part No.		Remarks
		KU type	KC type	
△	Power supply assembly PU cord assembly Packing case	XWR-047 PXB-345 PHH-123	XWR-048 PXB-333 PHH-134	

Parts List

Power Supply Assembly (XWR-048)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
★ D1		PCX-010 (SIRBA10)

CAPACITORS



Mark	Symbol & Description	Part No.
C1		CKDYF 103Z 50
C2		CEA 221M 25L

TRANSFORMER

Mark	Symbol & Description	Part No.
△ ★	Power transformer (120V)	PTT-168

Schematic Diagram and P. C. Board Pattern

POWER SUPPLY ASSEMBLY (XWR-048)

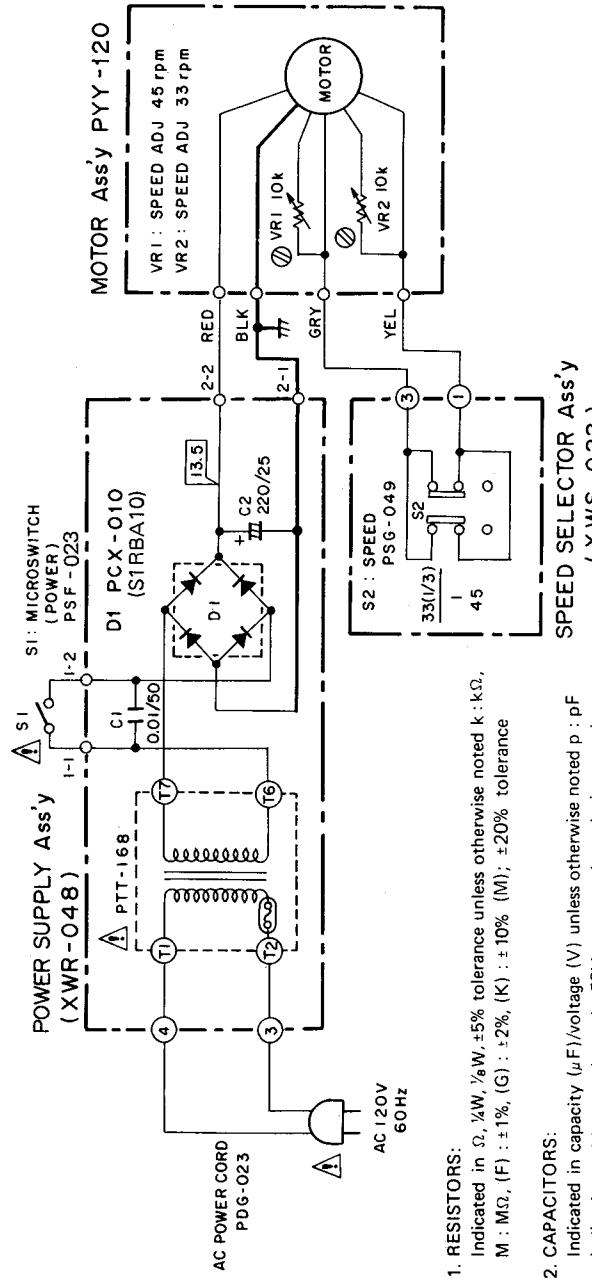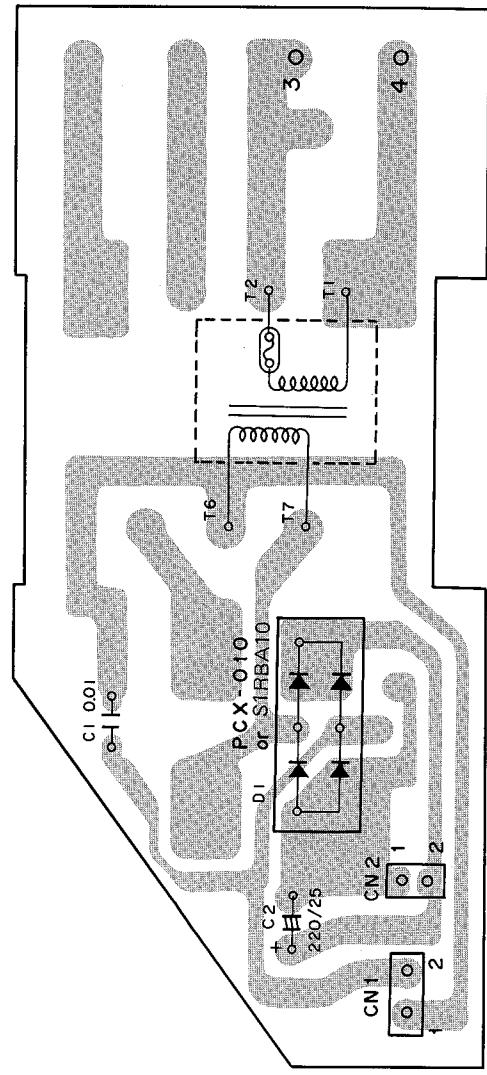

1. RESISTORS:
Indicated in Ω , $\%W$, $\%W$, $\pm 5\%$ tolerance unless otherwise noted $k \cdot \Omega$,
 $M \cdot M\Omega$, $(F) \cdot \pm 1\%$, $(G) \cdot \pm 10\%$, $(M) \cdot \pm 20\%$ tolerance

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted $p \cdot pF$
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE
_____ : DC voltage (V) at no input signal

4. OTHERS:

→ : Signal route.

◎ : Adjusting point.

The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

SWITCHES:

S1 : POWER ON - OFF
S2 : SPEED 33/1/3 rpm - 45 rpm

The underlined indicates the switch position.

11.2 PL-450/R, WEM AND WB TYPES

Model PL-450/R, WEM and WB types are the same as the PL-450/KU type with the exception of following sections.

MISCELLANEOUS PARTS

Mark	Symbol & Description	KU type	R type	WEM type	WB type	Remarks
△	Power supply assembly	XWR-047	XWR-046	XWR-044	XWR-044	
△	AC power cord	PDG-023	PDG-028	PDG-037	...	
△	AC power cord assembly	PXB-333	PDF-212	
△	PU card assembly	PXB-345	PXB-333	PSB-011	PXB-333	
△ ★	Line voltage selector	
	Screw 3 x 10 (For line voltage selector)	...	IPZ30P100FMC	
	Panel	PNY-151	PNY-152	PNY-151	PNY-151	
	Operating instructions (English)	PRB-256	PRB-256	PRB-256	PRB-256	
	Operating instructions (Spanish)	...	PRC-008	
	Operating instructions (English/German/French/Italian)	PRE-023	...	
	Packing case	PHH-123	PHH-122	PHH-122	PHH-122	

Parts List

For R type Power Supply Assembly (XWR-046)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★ D1		PCX-010 (S1RBA10)	★ D1		PCX-010 (S1RBA10)


CAPACITORS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
C1		CKDYF 103Z 50	C1		CKDYF 103Z 50
C2		CEA 221M 25L	C2		CEA 221M 25L

OTHERS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
△ ★	Power transformer (110V ~ 120V, 220V ~ 240V)	PTT-170	△	★ Power transformer (220V ~ 240V)	PTT-169

**Schematic Diagram
FOR PL-450/R TYPE**

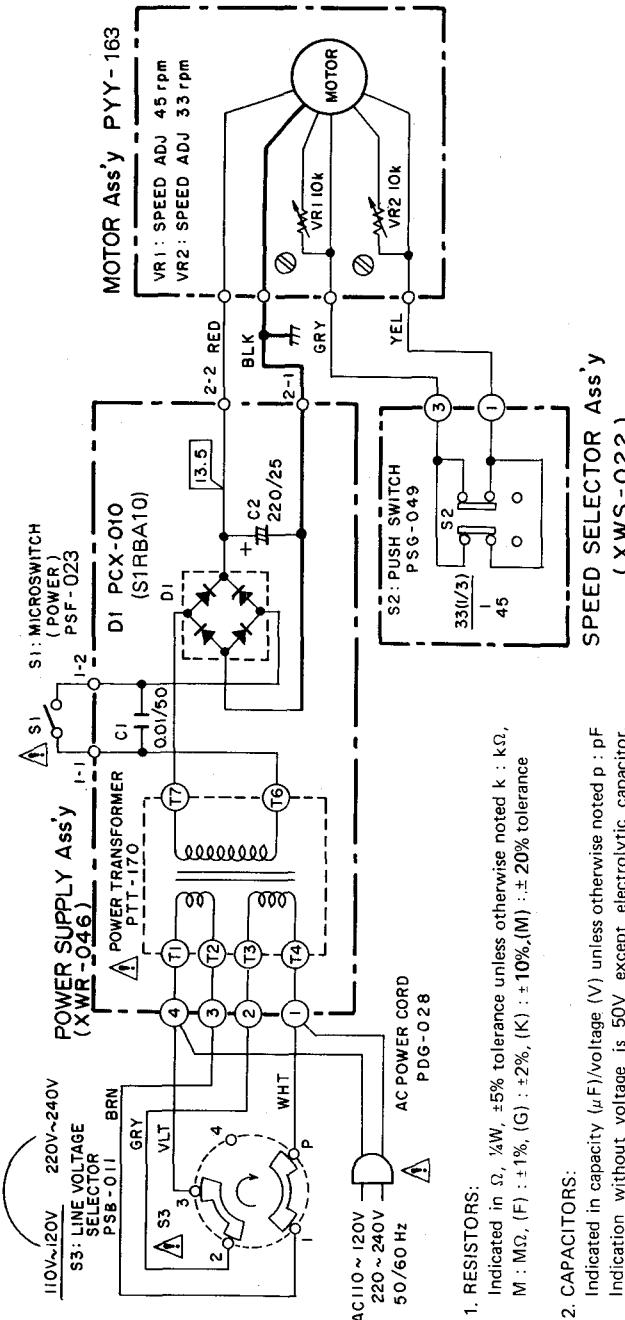

1. RESISTORS:

Indicated in Ω , $\frac{1}{2}W$, $\pm 5\%$ tolerance unless otherwise noted $k : k\Omega$, $M : M\Omega$, $(F) : \pm 1\%$, $(G) : \pm 2\%$, $(K) : \pm 10\%$, $(M) : \pm 20\%$ tolerance

2. CAPACITORS:

Indicated in capacity (μF)/voltage ('V) unless otherwise noted $p : pF$. Indication without voltage is $50V$ except electrolytic capacitor.

3. VOLTAGE

: DC voltage ('V) at no input signal

4. OTHERS:

: Signal route.


: Adjusting point.

The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

P.C. Board Pattern

POWER SUPPLY Ass'y (WXR-046)

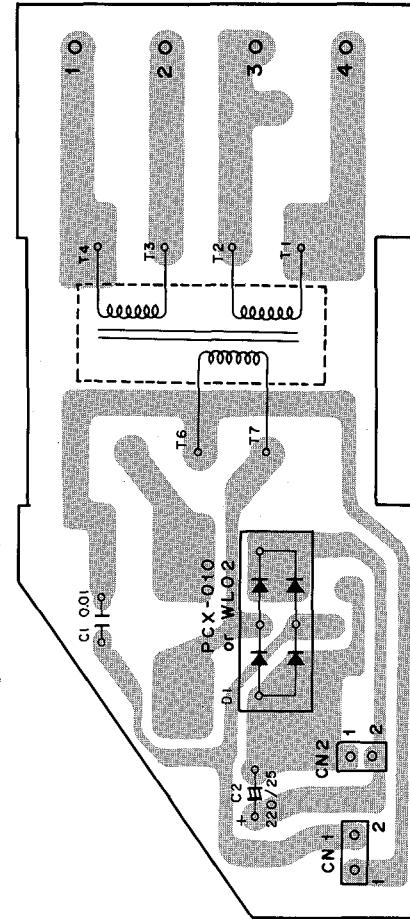


The underlined indicates the switch position.


The underlined indicates the switch position.

The underlined indicates the switch position.

Schematic Diagram •FOR PL-450/WEM TYPE

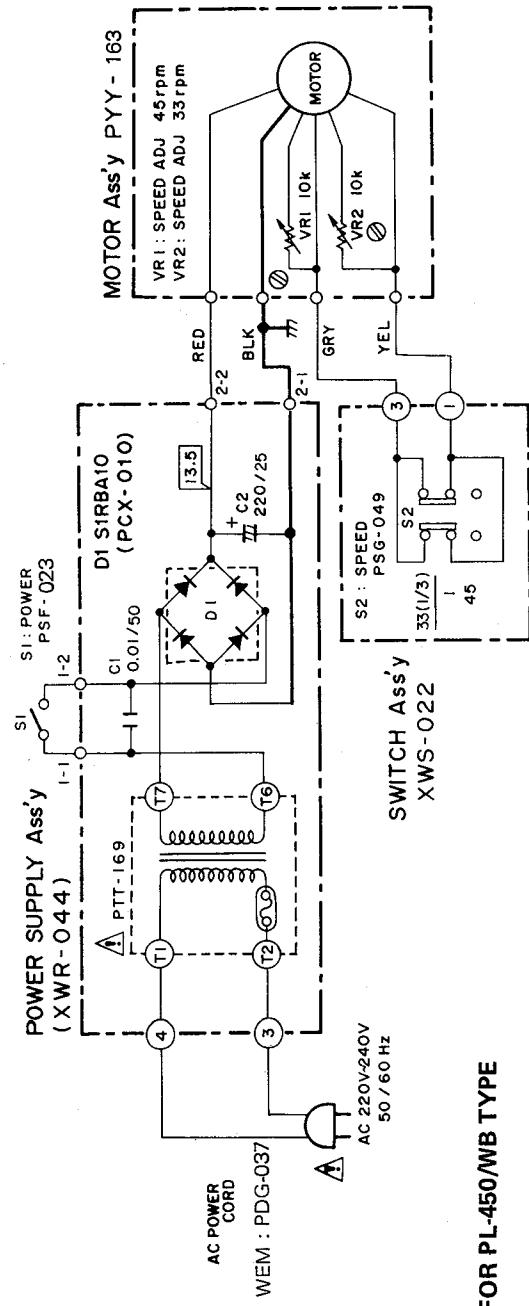

FOR PL-450/WB TYPE

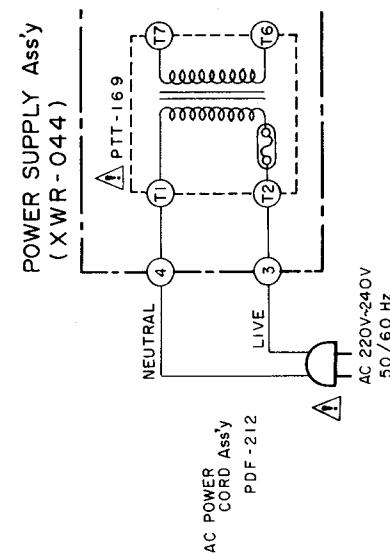


SWITCHES:

S1 : POWER ON — OFF

S2 : SPEED 33 1/3 rpm — 45 rpm

The underlined indicates the switch position.

P. C. Board Pattern Power Supply Assembly (XWR-044)

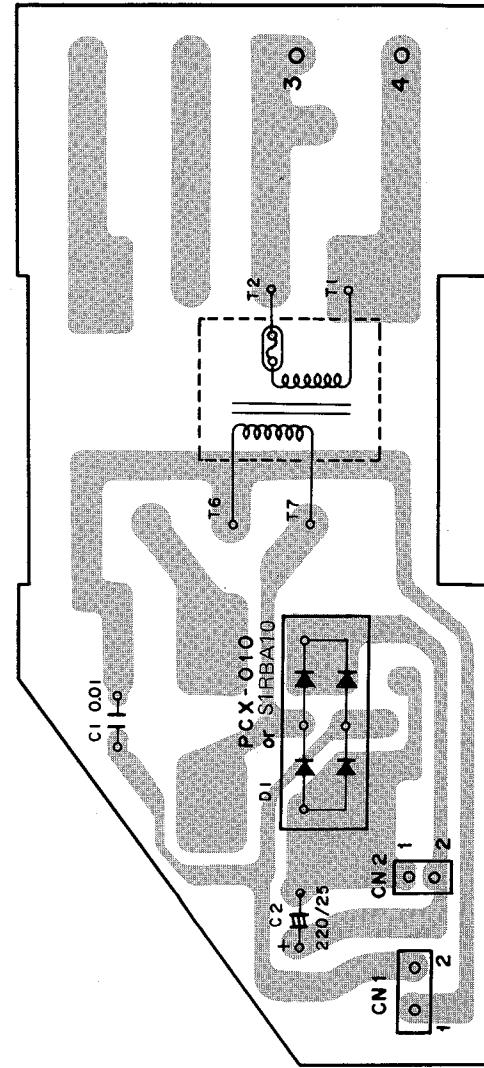

12. FOR PL-405/R, WB, KU AND KC TYPES

12.1 PL-405/R AND WB TYPES

Model PL-405/R, WB types are the same as the PL-450/KU type with the exception of following sections.

MISCELLANEOUS PARTS

Mark	Symbol & Description	Part No.		Remarks
		PL-450/KU type	PL-405/R type	
△	Panel	PNY-151	PNY-154	PNY-153
△	SP button unit	PAD-147	PAD-148	PAD-148
△	Power supply assembly	XWR-047	XWR-046	XWR-044
△	AC power cord	PDG-023	PDG-028	...
△	AC power cord assembly	PDF-212
△	PU cord assembly	PXB-345	PXB-333	PXB-333
△	PU rest assembly	PXB-373	PXB-396	PXB-396
△ ★ *	Line voltage selector
△	Screw 3 x 10 (For line voltage selector)	...	PSB-011	...
△	Packing case	...	IPZ30P100FMC	...
△	Operating instructions (spanish)	PHH-123	PHH-124	PHH-124
		...	PRC-008	...

Parts List

For R type

Power Supply Assembly (XWR-046)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★ D1		PCX-010 (S1RBA10)	★ D1		PCX-010 (S1RBA10)

CAPACITORS


Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
C1		CKDYF 103Z 50	C1		CKDYF 103Z 50
C2		CEA 221M 25L	C2		CEA 221M 25L

OTHERS

Mark	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
△ ★	Power transformer (110V ~ 120V, 220V ~ 240V)	PTT-170	△	★ Power transformer (220V ~ 240V)	PTT-169

Schematic Diagram and P.C. Board Pattern (For PL-405/R type)

FOR PL-450/R TYPE

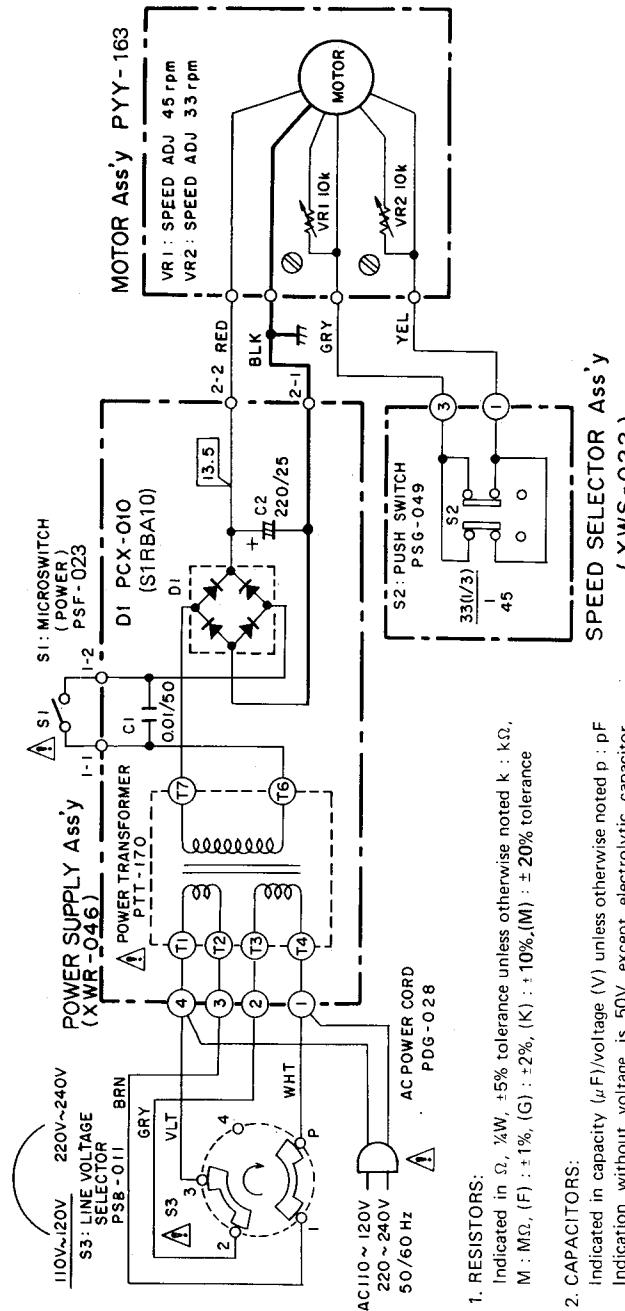

1. RESISTORS:
Indicated in Ω , $\%W$, $\pm 5\%$ tolerance unless otherwise noted $k : k\Omega$, $M : M\Omega$, $(F) : \pm 1\%$, $(G) : \pm 2\%$, $(K) : \pm 10\%$, $(M) : \pm 20\%$ tolerance.

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted $p : pF$
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE

DC voltage (V) at no input signal

4. OTHERS:

: Signal route.


: Adjusting point.

The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.



P.C. Board Pattern

POWER SUPPLY Ass'y (WXR-046)

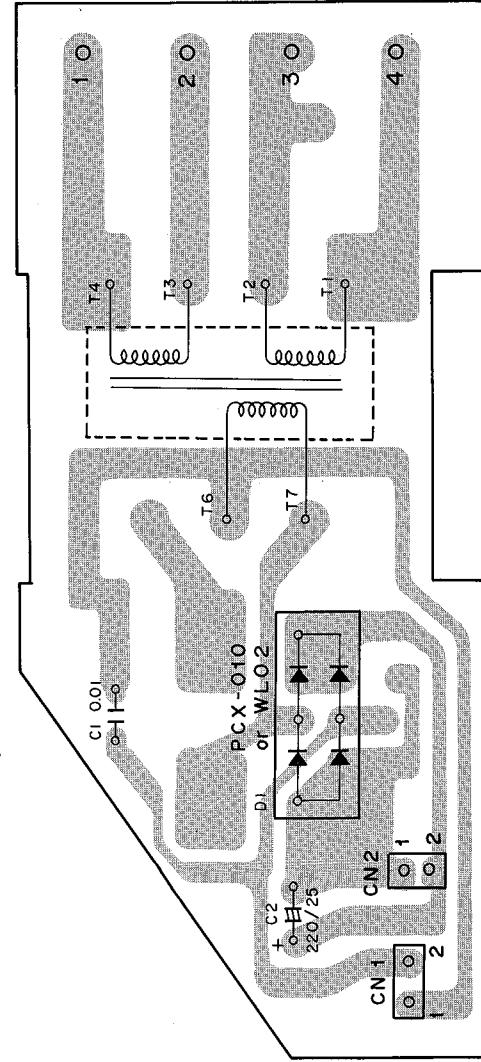

Schematic Diagram and P. C. Board Pattern (For PL-405/WB type)

POWER SUPPLY ASSEMBLY (XWR-044)

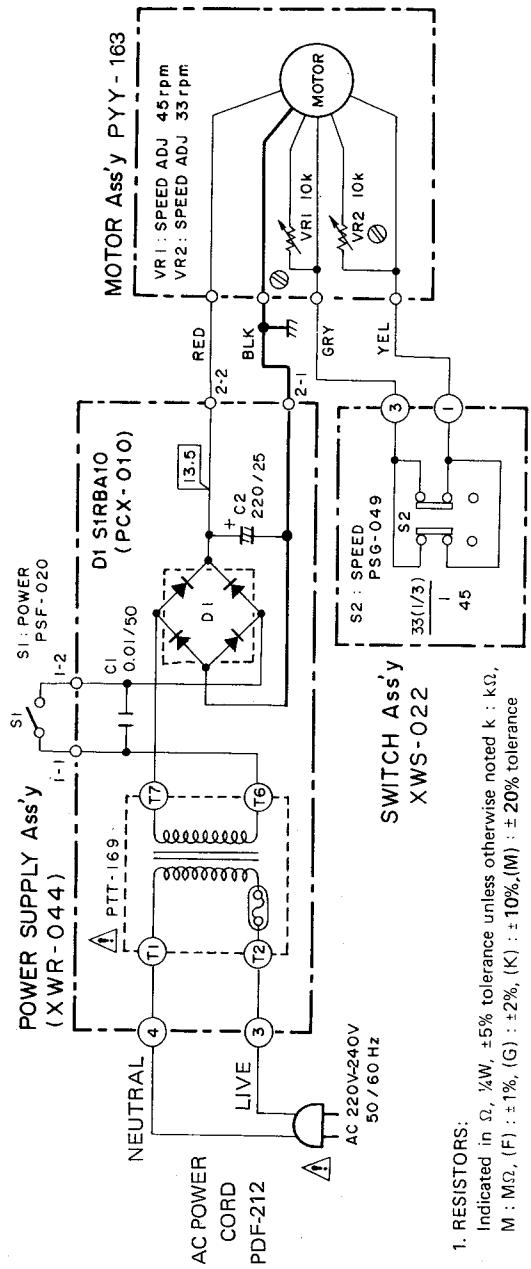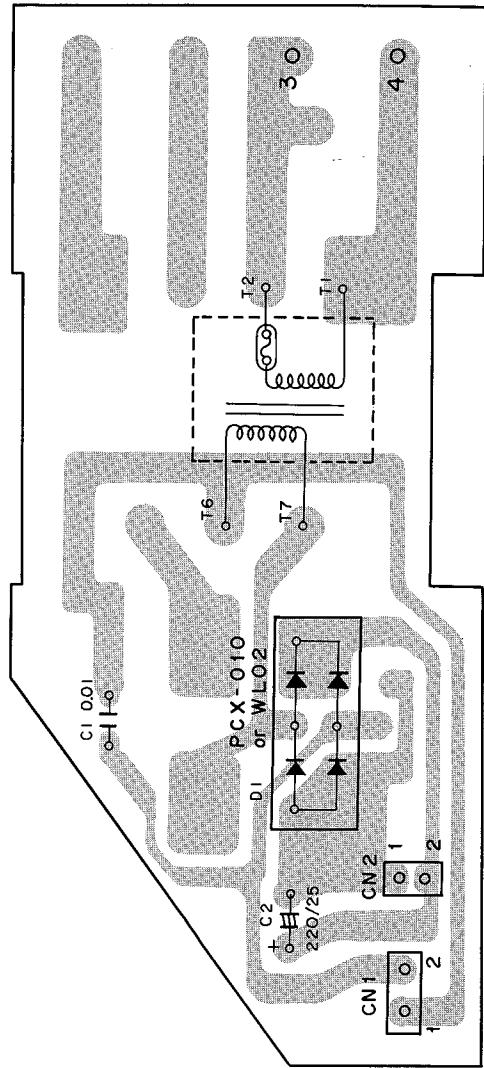

1. RESISTORS:

Indicated in Ω , $\frac{1}{4}W$, $\pm 5\%$ tolerance unless otherwise noted $k : k\Omega$,
 $M : M\Omega$, $(F) : \pm 1\%$, $(G) : \pm 2\%$, $(K) : \pm 10\%$, $(M) : \pm 20\%$ tolerance

2. CAPACITORS:

Indicated in capacity (μF)/voltage (V) unless otherwise noted μF
 Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE

$\boxed{}$: DC voltage (V)

4. OTHERS:

\odot : Adjusting point.

The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

SWITCHES:
 S 1 : POWER ON — OFF
 S 2 : SPEED 33 1/3 rpm — 45 rpm

The underlined indicates the switch position.

12.2 PL-405/KU AND KC TYPES

Model PL-405/KU,KC types are the same as the PL-450/KU type with the exception of following sections.

MISCELLANEOUS PARTS

Mark	Symbol & Description	Part No.			Remarks
		PL-450/KU type	PL-405/KU type	PL-405/KC type	
Panel	PNY-151	PNY-153	PNY-153	PNY-153	
SP button unit	PAD-147	PAD-148	PAD-148	PAD-148	
Power supply assembly	XWR-047	XWR-047	XWR-047	XWR-048	
PU cord assembly	PXB-345	PXB-345	PXB-345	PXB-333	
Packing case	PHH-123	PHH-125	PHH-125	PHH-135	
Arm rest assembly	PXB-373	PXB-396	PXB-396	PXB-396	

Parts List

For KU type

Power Supply Assembly (XWR-047)

SEMICONDUCTORS

Mark	Symbol & Description	Part No.			Part No.
		Mark	Symbol & Description	Part No.	
★ D1		★ D1		PCX-010 (S1RBA10)	PCX-010 (S1RBA10)

CAPACITORS

Mark	Symbol & Description	Part No.			Part No.
		Mark	Symbol & Description	Part No.	
C1		C1		CKDYF 103Z 50	CKDYF 103Z 50
C2		C2		CEA 221M 25L	CEA 221M 25L


OTHERS

Mark	Symbol & Description	Part No.			Part No.
		Mark	Symbol & Description	Part No.	
★ D1	★ Power transformer (120V)	PTT-167	★ Power transformer (120V)	PTT-168	PTT-168


Schematic Diagram and P. C. Board Patterns

For KU type


POWER SUPPLY ASSEMBLY (XWR-047)

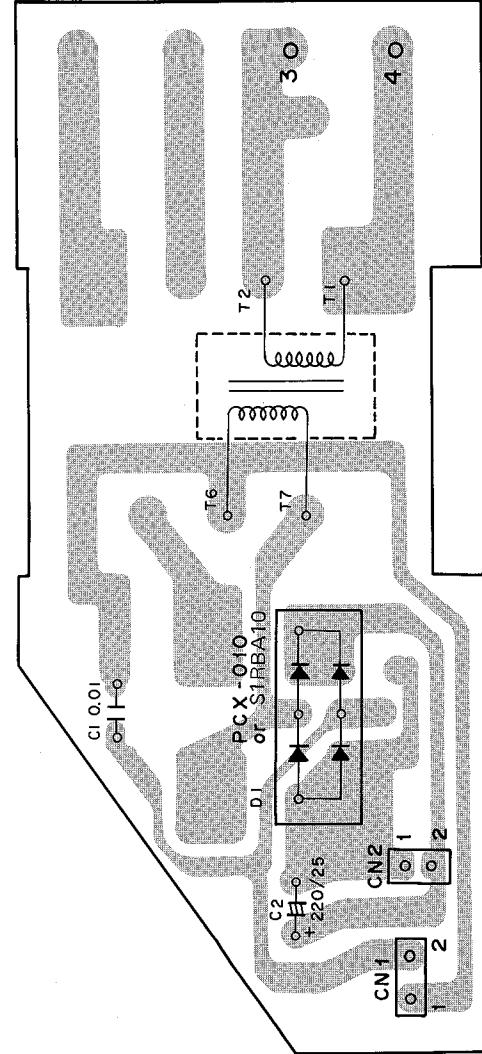

For KC type
POWER SUPPLY ASSEMBLY (XWR-048)

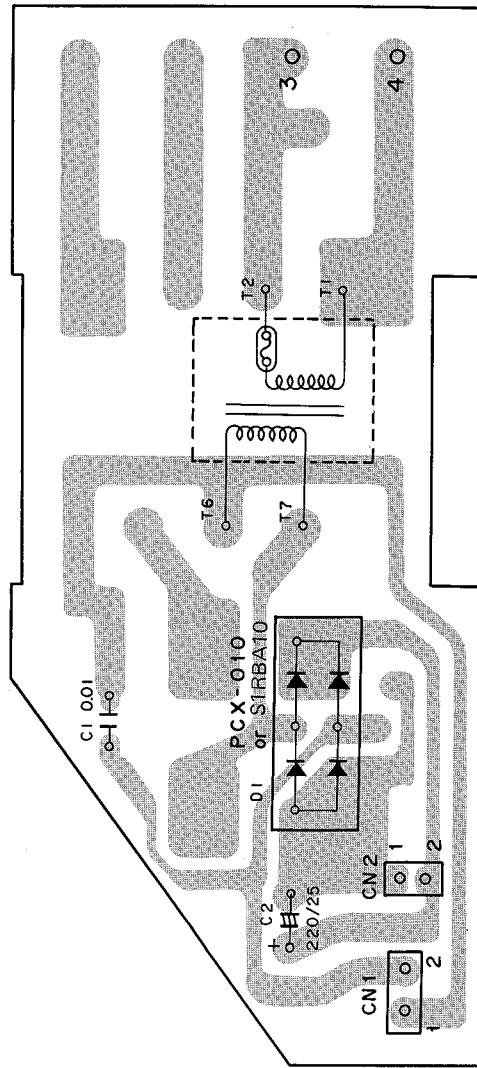


For kill time

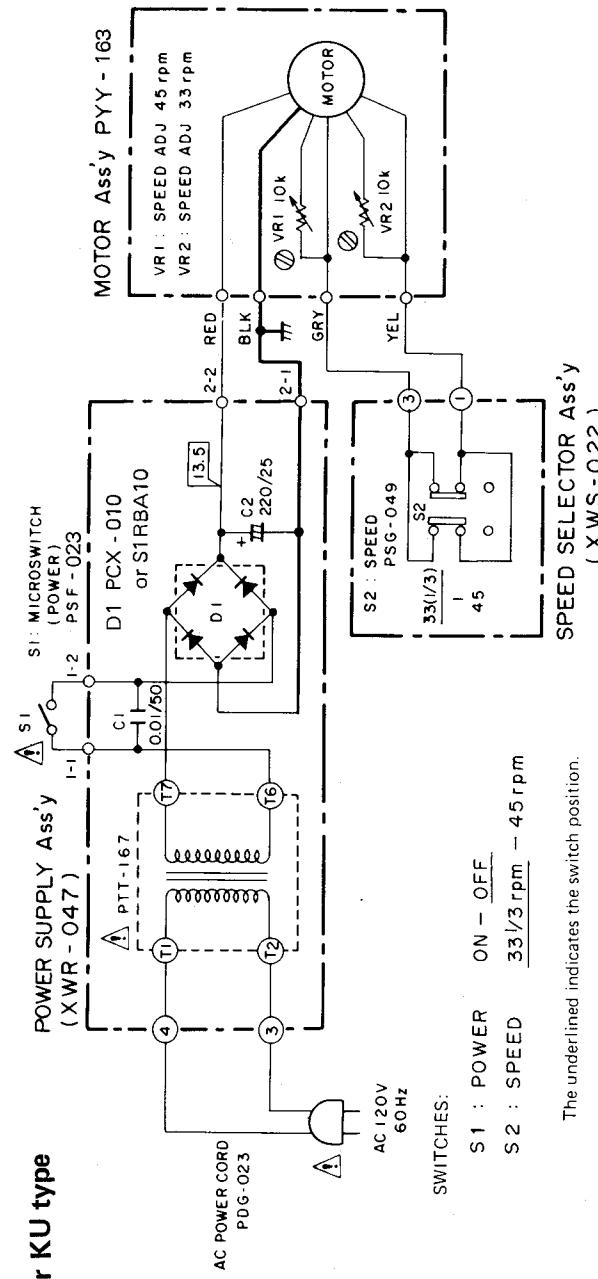

The underlined indicates the switch position.

For KC type

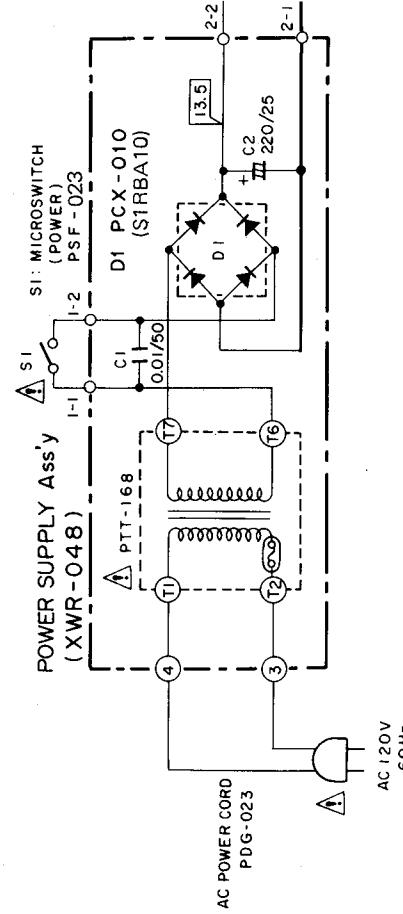


13. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technical.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

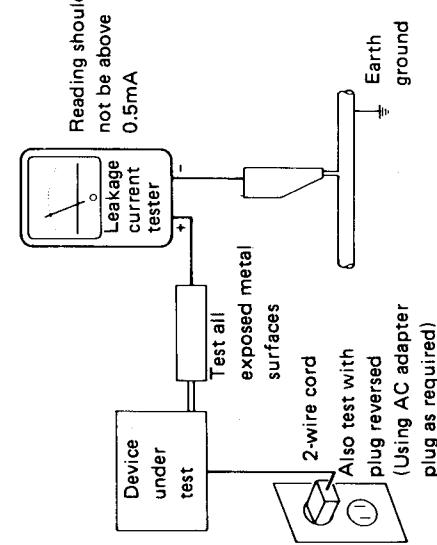

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

QUESTIONNAIRE

MODEL

One Model per questionnaire

Dear Servicer,

Thank you for your cooperation in the post-sale service of Pioneer products.

This questionnaire is used as a tool to improve the serviceability of our products and service manuals. Please evaluate this model and service manual by answering the following questions. Your ideas may be realized in our future products. Your answers will be appreciated. Thank you.

PIONEER ELECTRONIC CORP.

T. Nakagawa, Manager, Service Section, International Division

1. SERVICING EVALUATION		Circle applicable number:	Good	Fair	Poor		
a. Disassembly/Re-assembly:			1	2	3	*4	*5
b. Circuit Checks:			1	2	3	*4	*5
c. Replacement of Parts:			1	2	3	*4	*5
d. Adjustment (s):			1	2	3	*4	*5

* If (4) or (5) was circled, please be specific.

e. Your advice, opinion or ideas related to servicing this product.

2. SERVICE MANUAL EVALUATION

a. Circuit & Mechanism Description

b. Circuit Diagram

3. OTHER

Please describe other areas of servicing which you may find difficult.

Completed by : **Date :**

Company Name :

Address :

City/State/Zip :

Please send this form filled to the distributor in your country.

ENCUESTA

Modelo _____

Uno modelo por encuesta

Querido señor,

Muchas gracias por su cooperación en el servicio de post-venta de los productos de Pioneer. Esto es para mejorar el servicio de post-venta de nuestros productos. Les pedimos a ustedes responder a las preguntas siguientes. Su opinión e idea estarán tenido en cuenta en los productos futuros.

Nos complacemos en saludarles muy atentamente,

PIONEER ELECTRONIC CORPORATION

T. Nakagawa, Manager, Service Section, Administration Department, International Division

**1. EVALUACION EN LA FACILIDAD DE SERVICIO
MODELO**

Marque uno entre los numeros siguientes.

Bueno Medio Malo

a. Desmonte:

1	2	3	*4	*5
---	---	---	----	----

b. Examen de circuito:

1	2	3	*4	*5
---	---	---	----	----

c. Reemplazo de piezas:

1	2	3	*4	*5
---	---	---	----	----

d. Ajuste:

1	2	3	*4	*5
---	---	---	----	----

* Si marca (4) o (5), ejemplifiquelo concretamente.

e. Su consejo, opinión u idea en el servicio de este modelo.

2. EVALUACION DEL MANUAL DE SERVICIO

a. Circuito & Descripción de mecanismos.

b. Diagrama del circuito.

3. OTRAS

Describe otras partes difíciles de reparar.

Respondido por : **Fecha :**

Nombre :

Edad :

Compañía :

Dirección :

Manda esta encuesta al domicilio del distribuidor, por favor.

QUESTIONNAIRE

Modèle _____
Un modèle par questionnaire

Cher Monsieur,

Merci pour votre coopération à propos du service après-vente des produits PIONEER.

Ce questionnaire a pour but l'amélioration de notre service d'entretien et des manuels de nos produits. Nous vous prions d'évaluer dans ce questionnaire les éléments de nos manuels de service. Vos conseils seront précieux et pris en considération dans la réalisation de nos produits dans l'avenir. En vous remerciant d'avance, agréez, cher monsieur, l'expression de nos sentiments distingués.

PIONEER ELECTRONIC CORPORATION

T. Nakagawa, Manager, Service Section, Administration Department, International Division

**1. ÉVALUATION EN FACILITÉ DE SERVICE
MODÈLE**

a. Démontage/remontage

Cerclez le numéro.	
Bon,	Passable,
Mauvais,	

b. Examen de circuits

1	2	3	*4	*5
---	---	---	----	----

c. Rechange de pièces

1	2	3	*4	*5
---	---	---	----	----

d. Facilité de réglage

1	2	3	*4	*5
---	---	---	----	----

* Si vous cerclez No. 4 ou 5, donnez l'explication concrète.

e. Votre conseil ou avis sur le service

2. VOTRE APPRÉCIATION DU MANUEL DE SERVICE

a. Circuit et description du mécanisme.

b. Diagramme du circuit.

3. AUTRES

Anotez les autres points difficiles à réparer.

Répondu par :

Nom :

Compagnie :

Adresse :

Date :

Âge :

Adressez-vous ce questionnaire au distributeur, S.V.P.